



* You may have to swap 2 and 3 to get the signal to trigger on ASA software

WARNING

1. Do not connect Line IN for adjs.
2. Connect Line out and ADJ R1 for 20Vpp IC1 pin 1
3. ADJ R2 & R4 for 0.5Vpp X2 pin 2 & 3