

6 Replacement Spares

Refer to Chapter 6 for a full list of replacement spares.

7 Wiring Diagrams

Refer to Ship's Manual 65800010B Chapter 3 for complete system installation diagrams.

The wiring diagrams Included in this section are as follows:

- Figure 2.36 X-Band Turning Unit (Aloft) Schematic
- Figure 2.37 X-Band Turning Unit (Bulkhead) Schematic.
- Figure 2.38 X-Band Transceiver Schematic

Intentionally Blank

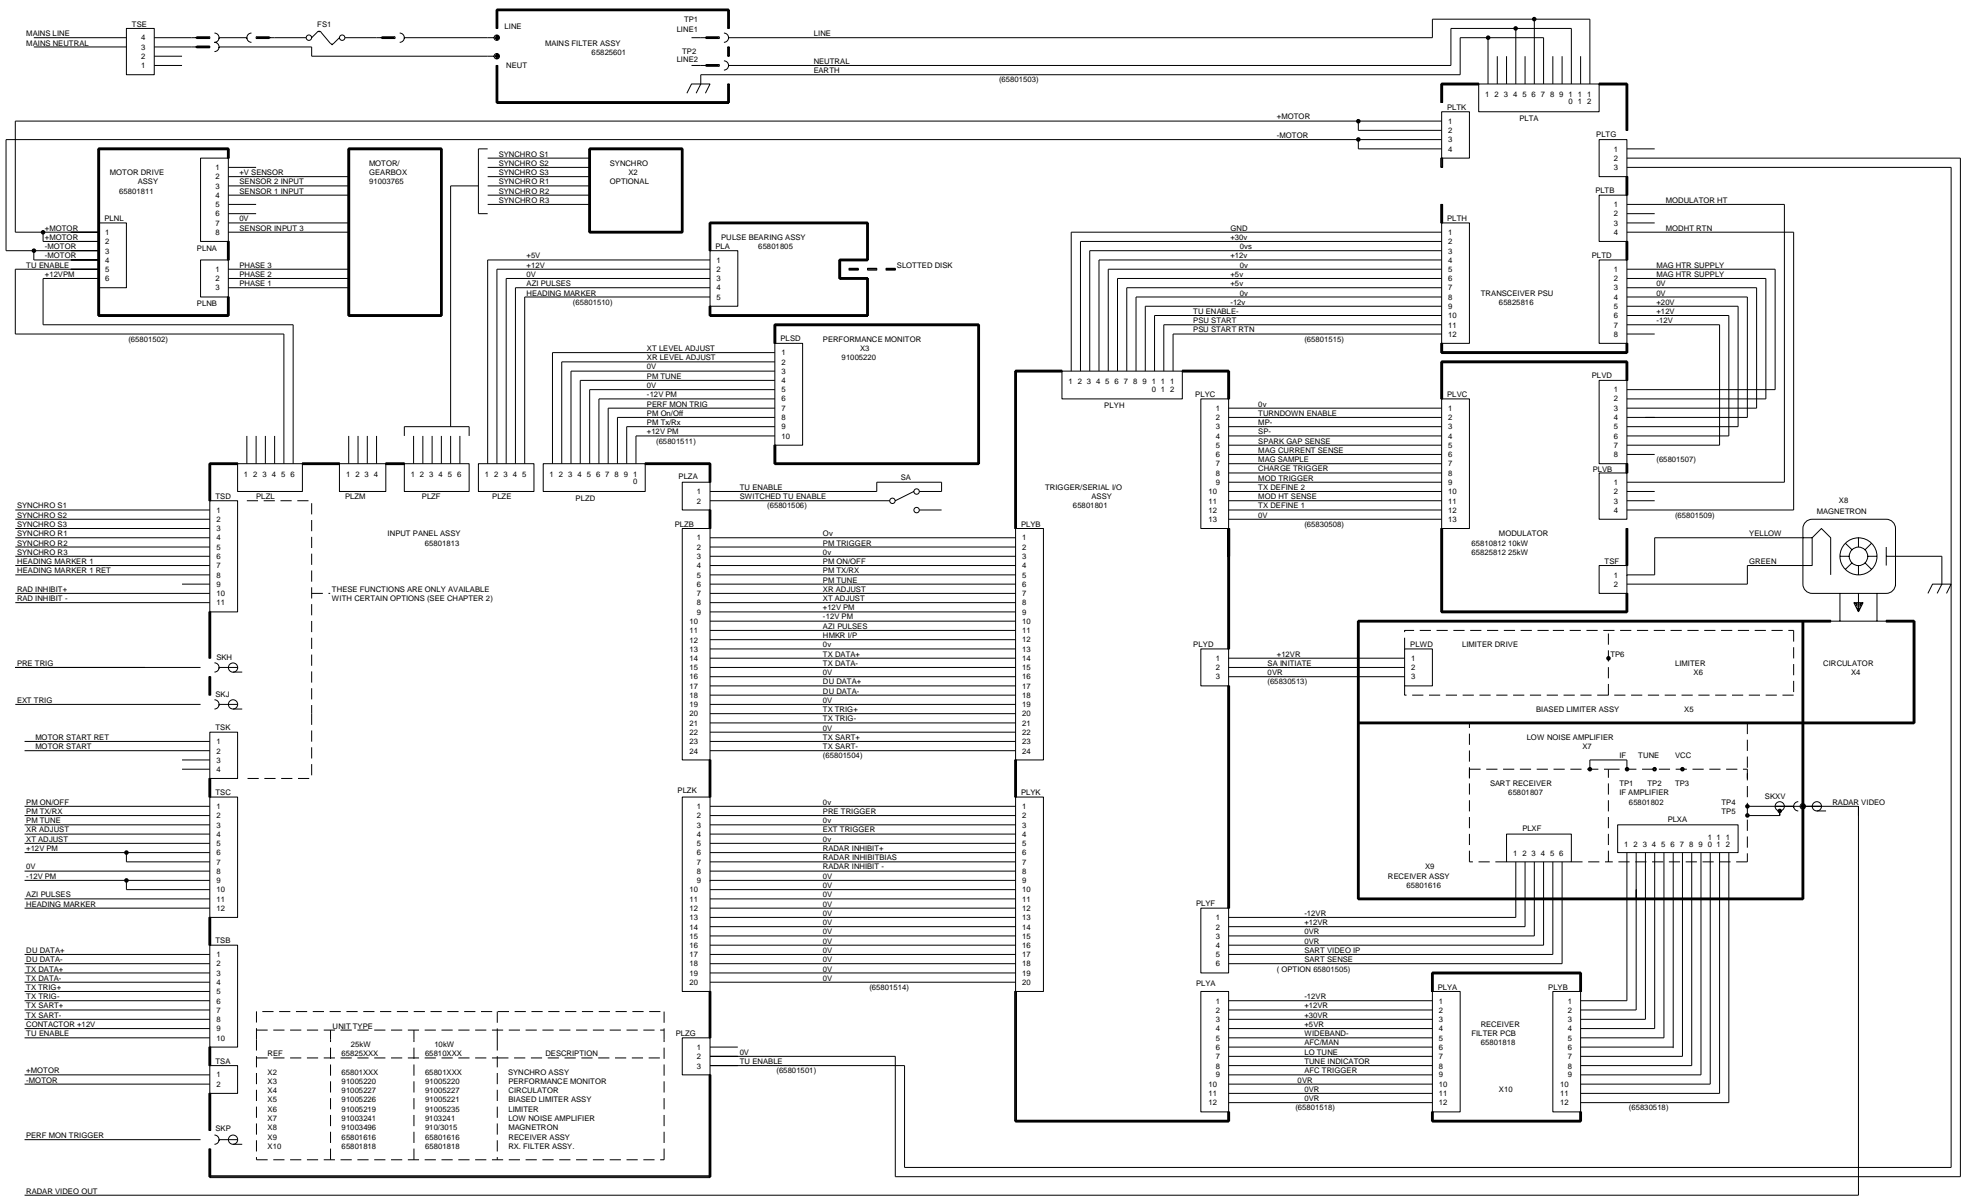


Figure 2.36 X-Band Turning Unit (Aloft) Schematic

A3 page 2-87/88 Figure 2.36, discard this A4 sheet.

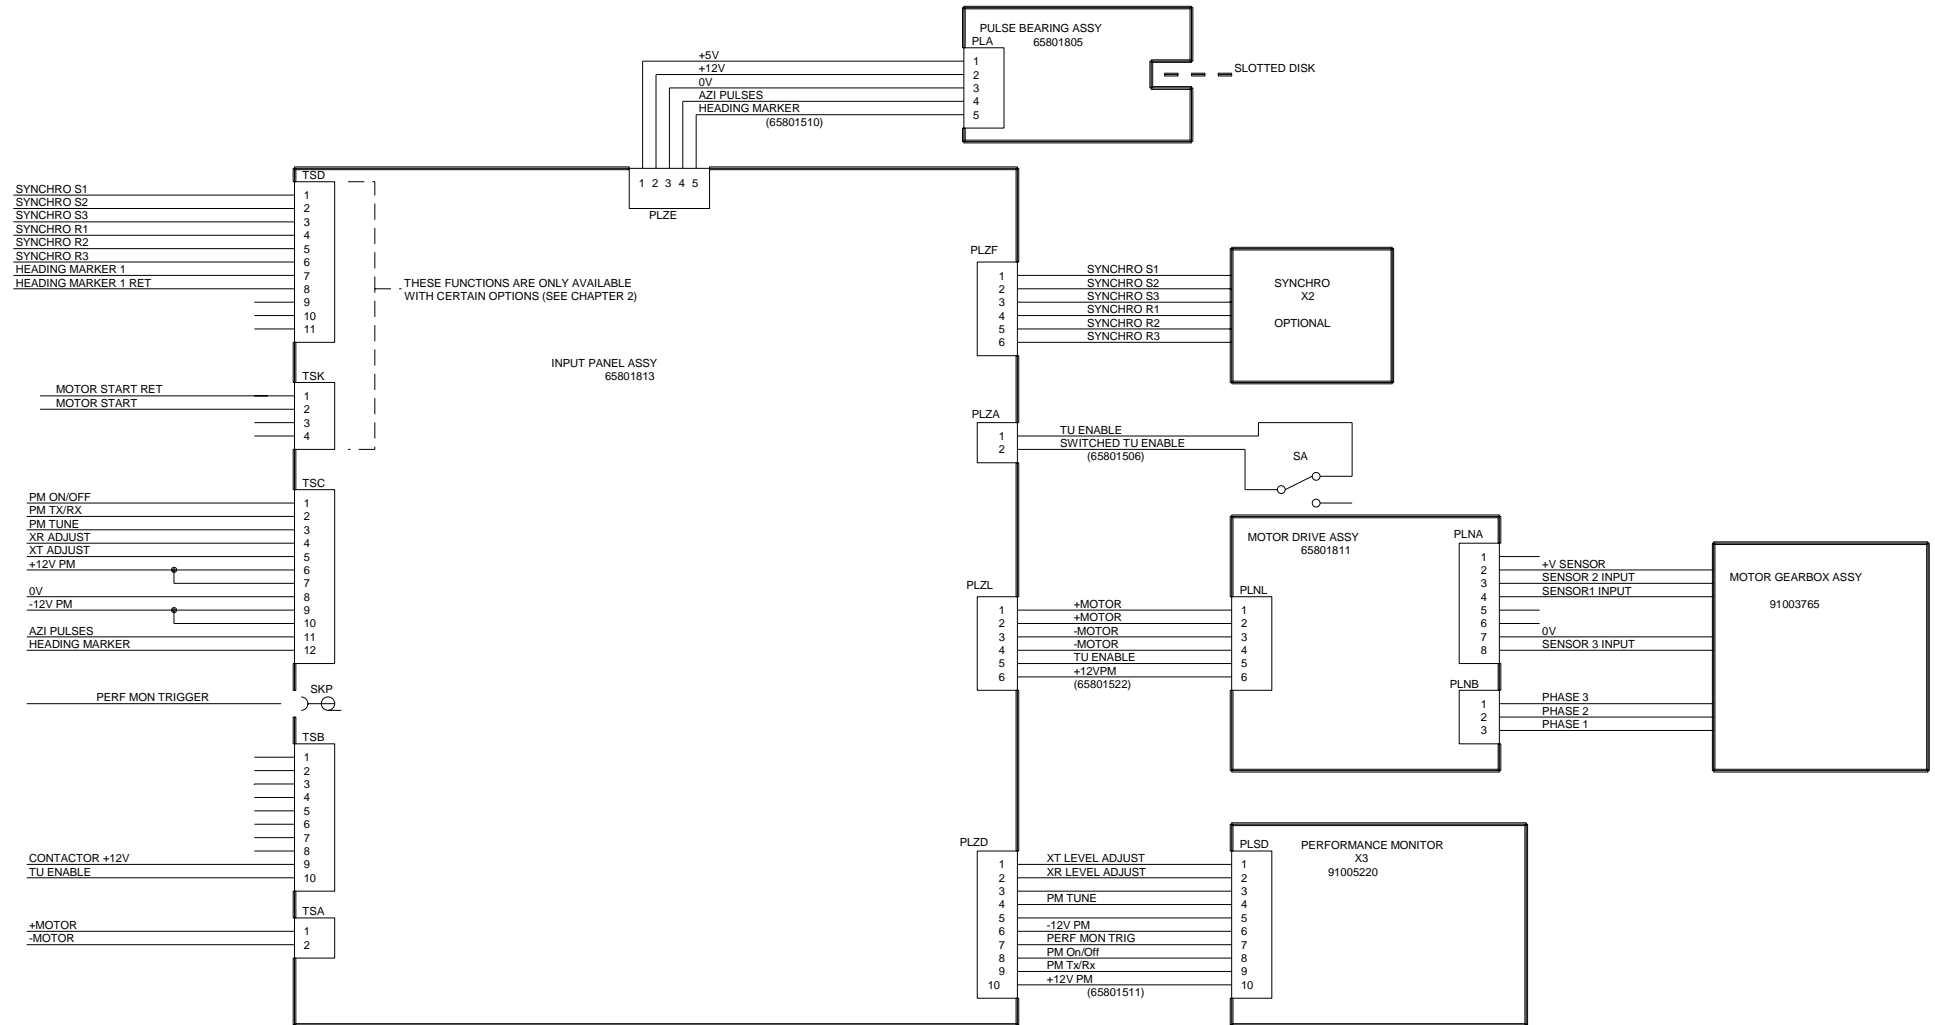


Figure 2.37 X-Band Turning Unit (Bulkhead) Schematic

A3 page 2-89/90 Figure 2.37, discard this A4 sheet.

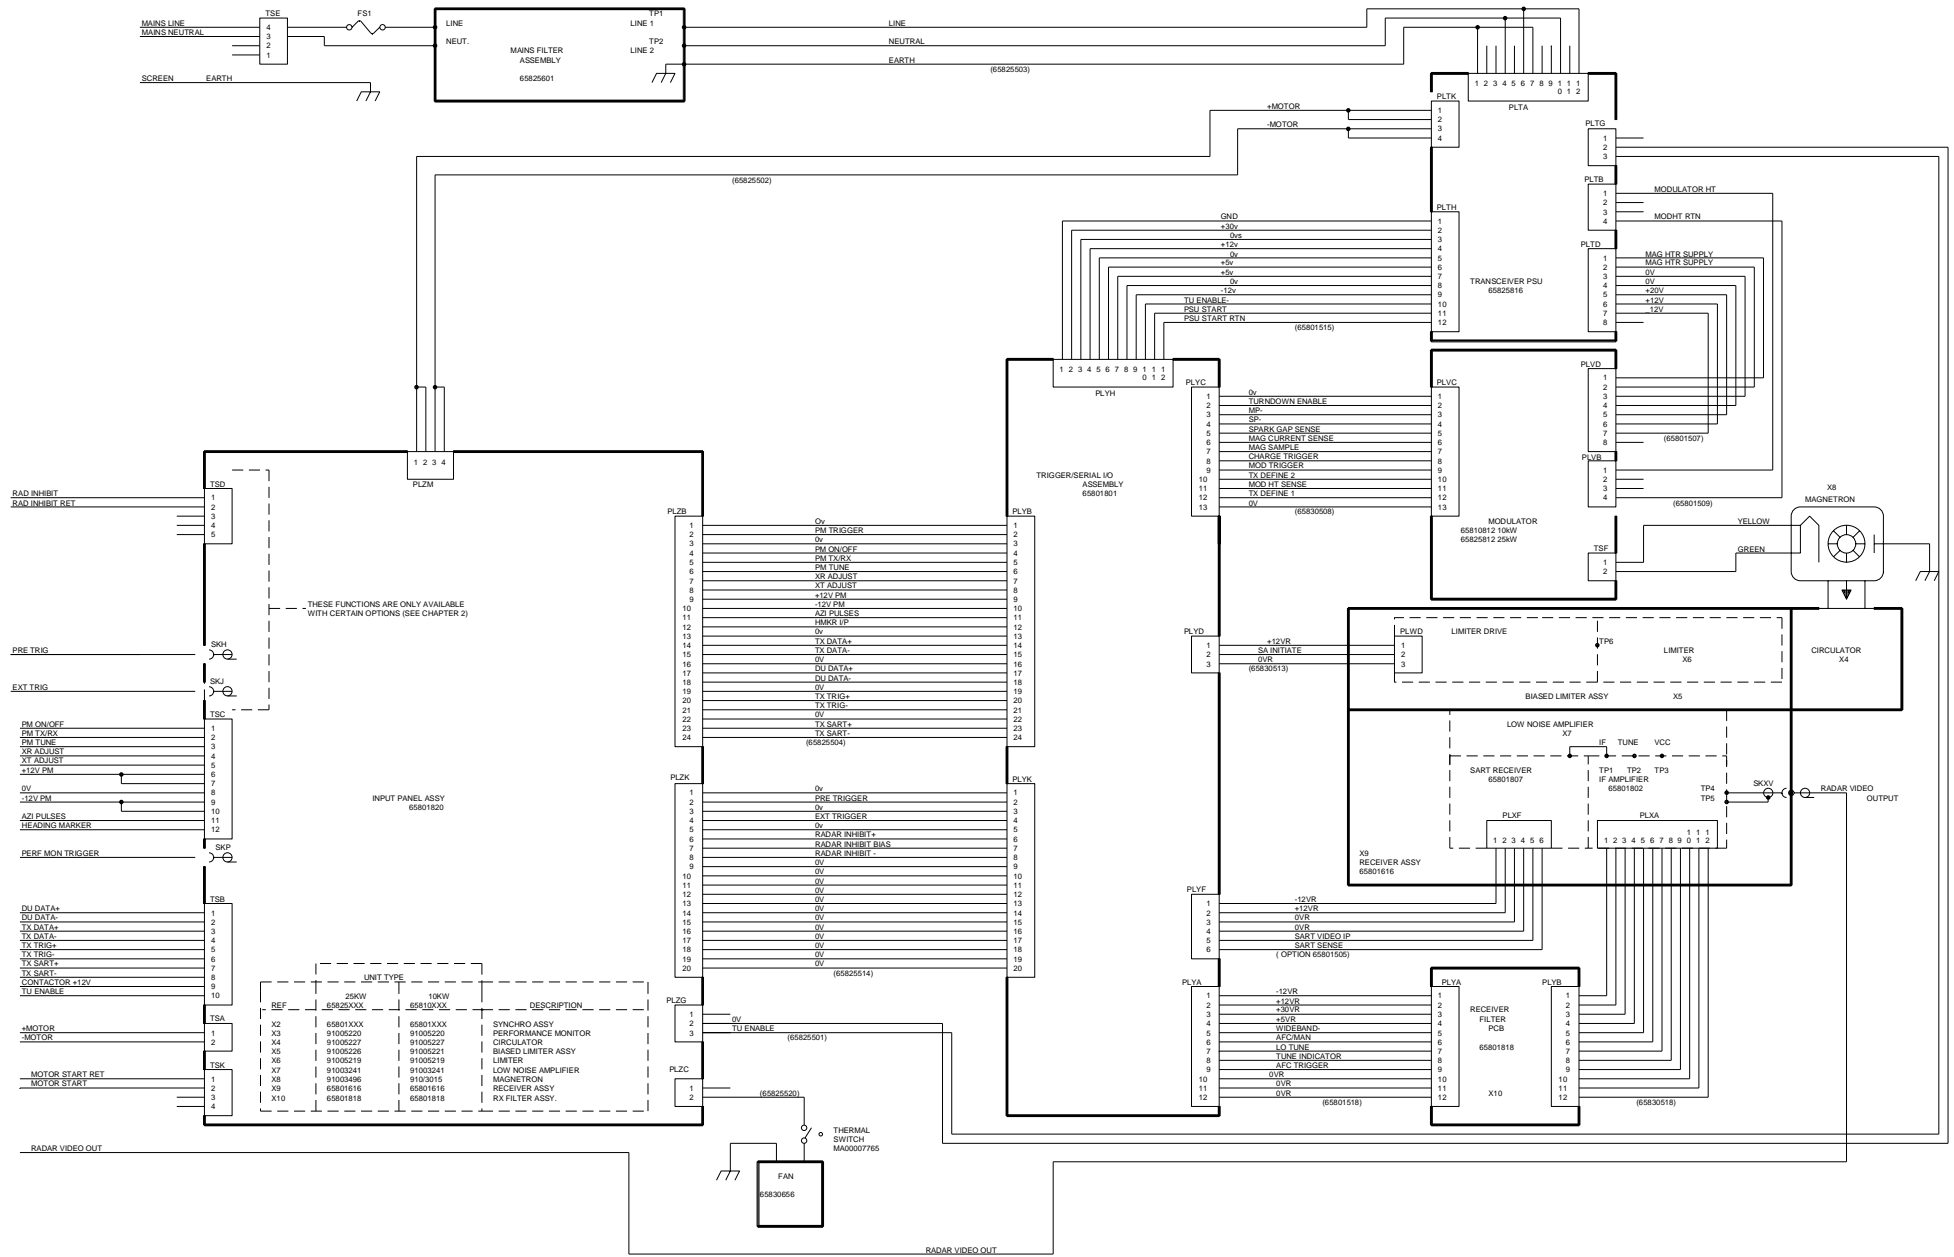


Figure 2.38 X-Band Transceiver Schematic

A3 page 2-91/92 Figure 2.38, discard this A4 sheet.