

BridgeMaster



Radar

User Guide

For Hellenic Navy Combattante III

Part Number USG2524

Issue 1

© 2005 Northrop Grumman Sperry Marine B.V.

This publication and the information contained herein is and remains the intellectual property of Northrop Grumman Sperry Marine B.V. Northrop Grumman Sperry Marine B.V. provide a limited licence for the user to reproduce this material for their own internal purpose and use, but not for distribution to third parties. Reproduction of this material for resale or commercial gain is expressly prohibited.

Northrop Grumman Sperry Marine B.V. are not responsible for any loss or damage of any nature or kind whatsoever that may arise from either the use of this publication or its reproduction.

NORTHROP GRUMMAN

Sperry Marine

© Northrop Grumman Sperry Marine B.V.

Intentionally Blank

WARNINGS AND CAUTIONS

WARNING: Lethal Voltage Hazard

When access covers are removed, lethal voltages may be exposed. Some capacitors used in the equipment take several minutes to discharge their stored voltages after switch OFF, this is a lethal voltage hazard. Always set the supply switch-fuse to OFF and remove the fuses, before removing the access covers of the equipment.

WARNING: Health Hazard

When cleaning the inside of the equipment, take care not to inhale dust. The dust is a temporary health hazard, depending on individual allergies.

WARNING: Radiation Hazard

Keep outside the hazard zone around an antenna or open waveguide radiating power. When it is necessary to work on the Scanner Unit, make sure that radar is switched OFF, and that both the Mains Isolator and the Scanner Control Unit are turned to the OFF position.

Never look directly into an open waveguide.

Radar and other forms of RF radiation can cause Cardiac Pacemakers to malfunction. If you use a Cardiac Pacemaker and suspect a malfunction, leave the vicinity of the radar system immediately and seek medical advice.

Most countries accept that there is no significant radiation hazard at RF power density levels of up to 10 mW/cm².

CAUTION: Electrostatic Sensitive Devices (ESSDs)

This equipment contains ESSDs. Take care not to damage these devices by discharge of electrostatic voltages.

REVISION RECORD

Suf	Rev	Issue Date	Date Incorporated	Incorporated By
1	A	March 2005		

PREFACE

ABOUT THIS MANUAL

The structure of this manual and the design of the pages can help you to find the information that you need. Consistent presentation techniques are used throughout the manual, to make it easy to use.

This manual is intended to be used by the Radar Operator and is divided into chapters as follows:

- Chapter 1 - **An Overview**
- Chapter 2 - **Getting Started**
- Chapter 3 - **Basic Operation**
- Chapter 4 - **Ship's Heading and Speed**
- Chapter 5 - **Presentation, Motion, Vector and Trail Modes**
- Chapter 6 - **EBLs, ERBLs and VRMs**
- Chapter 7 - **Acquisition and Zone Functions**
- Chapter 8 - **Target Functions**
- Chapter 9 - **Navigation**
- Chapter 10 - **Maps**
- Chapter 11 - **Parallel Index Lines**
- Chapter 12 - **Tools**
- Chapter 13 - **Alarms**
- Chapter 14 - **System**
- Chapter 15 - **References**
- Annex A - **Search and Rescue (SART) Detection**

NOTICE

Northrop Grumman Sperry Marine B.V. have a policy of continuous development. This may lead to the equipment described in this manual being at variance with equipment manufactured after its publication.

The document may not be reproduced either in part or in whole without the permission of Northrop Grumman Sperry Marine B.V.

CONTENTS

Chapter 1 **An Overview**

System Components.....	1.2
System Overview.....	1.2
System Block Diagram.....	1.4
Control Panels.....	1.5
System Features.....	1.6
Common Features.....	1.6
Special Naval Features.....	1.8

Chapter 2 **Getting Started**

Switching On the Radar System.....	2.2
NAV Radar Start Up (Master Display).....	2.3
Slave Display Start Up.....	2.3
Standby Mode.....	2.4
Using the Radar Controls.....	2.6
Control Panels.....	2.6
Simple Control Panel.....	2.6
The On-screen Cursor.....	2.7
Screen Cursor.....	2.7
Video Cursor.....	2.8
Help Area.....	2.8
Soft Keys and Fixed Menus.....	2.10
Drop Down Menus.....	2.11
Selecting a Display Mode of Operation.....	2.11
TRANSMIT.....	2.11
INITIALISATION.....	2.11
MONITOR TEST.....	2.11
To Select a Mode.....	2.12
To Select Transmit.....	2.12

Chapter 3 **Basic Operation**

Introduction.....	3.2
System Configuration.....	3.4
Transceiver Functions NAV (TX/RX).....	3.5
Transceiver Tuning.....	3.5
Selecting Manual or Automatic Tuning.....	3.5
Manual Tuning Adjustment.....	3.5
Radar Transmission Pulse Length.....	3.6
Selecting Radar Transmission Pulse Length.....	3.6
Transceiver Functions (SCOUT TX/RX).....	3.7
Transmitter Power Level.....	3.7
Selecting Transmitter Power Level.....	3.7

STC	3.7
Selecting the STC Setting	3.8
Transmission Frequency	3.8
Selecting the Transmission Frequency	3.8
User Specified Data	3.9
Selecting the Data Type	3.9
Data Displays	3.9
Range Scales and Range Rings	3.12
Choosing the Appropriate RANGE Scale	3.12
Range Scale in SCOUT Mode	3.12
Selecting a Range Scale	3.12
Turning Range Rings ON and OFF	3.13
Heading Line (HL)	3.14
Stern Line (SL)	3.14
Temporarily Hiding the Heading/Stern Line	3.14
Off-centring the Picture	3.15
Centring the Video Display	3.15
Video Processing Controls	3.17
Video Gain and Anti-Clutter Controls	3.17
Enhanced Video Mode	3.18
Events	3.20
Brilliance Control	3.20
Day/Night Selection	3.21
Changing the Relative Brilliance Settings	3.21
Returning to the Default Brilliance Settings	3.21
Panel Brilliance	3.22
Exiting the Brilliance Menu	3.22
Returning to Standby Mode	3.22
Red First Strike	3.23
Freeze Frame	3.24
Warning Prompts	3.26
Chapter 4 Ship's Heading and Speed	
Introduction	4.2
Heading Display	4.2
Heading Caption	4.2
Heading Readout	4.2
Compass Errors	4.2
Compass Alignment	4.2
Course Over Ground	4.3
Speed Display	4.4
Speed Caption	4.4
Speed Readout	4.4
Speed Mode	4.4

Contents

Speed Mode Options	4.5
Selecting a Speed Mode	4.5
MANUAL Speed Mode	4.6
ECHO REFERENCE Speed Mode	4.6
Selecting a Target as the Echo Reference	4.6
Selecting a New Target as the Echo Reference	4.6
Manual Set and Drift	4.7
Drift Applied to Water Speeds	4.7

Chapter 5 **Presentation, Motion, Vector & Trail Modes**

Introduction	5.2
Presentation Modes	5.2
Selecting a Presentation Mode	5.3
Course-UP Reset	5.3
Motion Modes	5.4
Selecting a Motion Mode	5.5
Vector Modes	5.6
Selecting a Vector Mode	5.7
Selecting a Vector Time	5.7
Trails Modes	5.8
Trail Time	5.8
Selecting a Trails Mode	5.9
Warning Prompts	5.10
Presentation Mode Warnings	5.10
Motion Mode Warnings	5.10

Chapter 6 **EBLs, ERBLs and VRMs**

Introduction	6.2
Electronic Bearing Line (EBL)	6.2
Turning EBLs ON and OFF	6.2
Changing the Bearing of an EBL or ERBL	6.3
Direct ERBL Control	6.3
Variable Range Marker (VRM)	6.4
Turning VRMs ON and OFF	6.4
Changing the Range of a VRM	6.4
Combined VRM and EBL Control	6.4
Rapid Range and Bearing Readings	6.5
Options	6.5
Defaults	6.6
Warning Prompt	6.7

Chapter 7 **Acquisition and Zone Functions**

Introduction	7.2
--------------------	-----

Automatic Targeting and Radar Plotting Aid Radars	7.3
Target Acquisition	7.3
Target Tracking Limitations	7.3
Compass Errors	7.4
Target Alarm Symbols	7.5
Manual Acquisition of Targets	7.6
Acquiring a Target	7.6
Cancelling Target Acquisition	7.6
Auto-Acquisition Zones	7.7
Accessing the Auto-Acquisition Zones Menu	7.7
Turning Auto-Acquisition Zones On/Off	7.8
Defining an Acquisition Zone	7.8
Annular Zone Editing	7.9
Changing the Start/Stop Bearing	7.9
Changing the Range of a Zone	7.9
Altering the Depth of the Zone	7.9
Creating a New Zone	7.9
Polygonal Zone Editing	7.10
Defining a Zone	7.10
Editing Warning Prompts	7.10
Target Data	7.11
Acquired Target Data	7.11
Closest Approach and Bow Crossing Limits	7.12
To View the Limits	7.12
To Change the Limits	7.12
Changing the Data Shown in the Target Box	7.12
Multiple Target Displays	7.13
Viewing Multiple Targets in Order of CPA	7.13
Viewing Multiple Targets in Order of Range	7.13
Viewing up to 6 User Selected Targets	7.13

Chapter 8 Target Functions

Introduction	8.2
Accessing TARGET Functions	8.2
Turning the Display of TARGET Data ON or OFF	8.2
Past Position Dots	8.3
To Turn the Past Position Dots ON or OFF	8.3
To Select the Past Position Time Interval	8.3
Target IDs	8.4
To Change Display of Target Names and IDs	8.4
Naming Targets	8.4
Cancelling All Tracked Targets	8.5
Targets Currently Being Tracked	8.5

BridgeMaster E Radar User Guide

Contents

Target Repair	8.5
To Select Target Repair	8.5
Test Targets	8.6
Selecting Test Target Mode	8.6
Switching each Test Target ON and OFF	8.6
Changing Test Target Parameters	8.7
Limits & Settings Menu	8.7
Automatic Dropping of Targets	8.7
Autodrop.....	8.8
Vector Timeout.....	8.8
To Turn Vector Timeout ON or OFF	8.8
OS Vector Arrow	8.8
CPA, TCPA, BCR & BCT Limits	8.9
Trial Manoeuvres	8.10
Running a Trial Manoeuvre	8.10
Final Course of Own Ship	8.10
Speed of Manoeuvre	8.10
Manoeuvre Delay	8.10
Vector Type	8.11
Vector Time	8.11
Trial CPA/TCPA	8.11
Manoeuvre Switch ON	8.12
Dropline.....	8.14
To Adjust Dropline Distance.....	8.14
Switching the Dropline On and Off.....	8.15
Target Intercept.....	8.16
Selecting the Intercept Mode	8.16
Selecting the Interceptor	8.17
Selecting the Interceptee	8.17
Intercept Graphics.....	8.18
Planning the Intercept	8.19
Defaults and Other Operating Conditions	8.19

Chapter 9 Navigation

Introduction	9.2
Turning the Navigation Display ON and OFF	9.2
Accessing the NAVIGATION Menu.....	9.3
Track History.....	9.4
Track Segments	9.4
Time Marks	9.4
Event Marks	9.4
Starting/Stopping a Recording	9.7
Filenames.....	9.7
Setting the Time Interval	9.7

Selecting Targets for History Tracking.....	9.8
Deselecting Targets from History Tracking.....	9.8
Event Recording	9.9
Removing Current Track from Display.....	9.9
Replaying a Recorded Track	9.9
Off Line Centre (Standby Mode).....	9.10
Replaying Large Tracks	9.10
Switching the Replay OFF	9.11
Deleting a Track File from a Memory Card	9.11
Setting System Time and Date.....	9.12
Entering a UTC Date	9.12
Entering a Local Time Offset	9.13
Entering a Local Time and Date	9.13
Position.....	9.14
Navigation (NAV) Position Mode	9.15
Own Ship's Position.....	9.15
Estimated Position/Dead Reckoning (EP/DR) Mode	9.16
Cursor Display	9.17
Routes	9.18
Route Type	9.19
External Routes	9.20
Waypoint Data	9.20
Route Data.....	9.20
Selecting the LEG TYPE	9.21
Sailing Alarms.....	9.21
Internal Routes	9.23
Selecting an Internal Route from a Memory Card.....	9.24
Sailing an Internal Route	9.25
Joining a Route.....	9.25
Creating and Editing Internal Routes.....	9.27
Setting the OFF-LINE CENTRE for Editing in STANDBY Mode.....	9.28
Route Editing Procedure.....	9.29
Adding a Waypoint into a Route	9.29
Single Leg Routes	9.33
Setting the Single Leg Waypoint.....	9.33
Sailing a Single Leg Route	9.34
Position Database	9.35
Route and Waypoint Transfer.....	9.39
Transferring Routes and Waypoints	9.39
Statistics and Errors.....	9.40

Chapter 10 Maps

Introduction.....	10.2
Offsets	10.2

BridgeMaster E Radar User Guide

Contents

Layers	10.2
Guard Lines.....	10.3
Datums.....	10.3
Turning the Maps Display ON and OFF	10.3
MAP Facilities	10.4
Selecting Maps and Folios from a Memory Card	10.4
Turning the Selected Map ON and OFF	10.5
Offsetting Map position	10.5
Selecting Map Layers.....	10.6
Activating and De-activating Guard Lines	10.6
Deselecting Maps and Folios.....	10.7
Deleting a Map from a Memory Card	10.7
Creating and Editing Maps/Layers.....	10.8
Creating a New Map	10.8
Editing a Selected Map	10.9
Displaying a Map for Editing in STANDBY Mode.....	10.9
Map Editing Procedures.....	10.10
Selecting a Map LAYER	10.10
Selecting an Edit Mode.....	10.11
Adding Lines and Symbols to a Map	10.12
Adding Lines in the Video Circle	10.12
Adding Symbols via the Video Circle	10.12
Adding Lines by Entering a Lat/Lon	10.13
Adding Symbols by Entering a Lat/Lon	10.14
Deleting Lines and Symbols from a Map	10.15
Deleting Line and Symbols in the Video Circle	10.15
Moving Lines and Symbols on a Map	10.16
Moving Lines and Symbols in the Video Circle	10.16
Modify Map Symbols.....	10.16
Modifying Symbols in the Video Circle.....	10.16
Saving a Map	10.17
Creating and Editing Folios.....	10.17
Viewing the Current Folio	10.17
Creating a New Folio.....	10.17
Adding a Map to a Folio	10.18
Removing a Map from a Folio	10.18
Saving a Folio	10.19
Editing a Folio	10.19
Deleting a Folio from a Memory Card	10.19
Creating and Deleting Guard Lines.....	10.20
Viewing the Current Guard Line Selection	10.20
Activating and Deactivating Guard Lines	10.20
Adding Guard Lines in the Video Circle	10.20
Deleting Guard Lines via the Video Circle	10.21

Deleting All Guard Lines 10.21

Viewing Guard Lines using the MENU 10.21

Adding Guard Lines using the Keypad 10.22

Deleting Guard Lines using the LIST 10.22

 Navline Interface..... 10.23

Mode Selection 10.23

LOCAL Mode 10.23

REMOTE Mode 10.23

 Remote Transfer Status 10.24

 Warning Prompts 10.25

Maps and Folios 10.25

Guard Lines 10.26

Editing: Lat/Lon Inputs 10.26

Editing: Adding Maps to Folios 10.26

Editing: Adding Guard Lines 10.26

Chapter 11 Parallel Index Lines

 Introduction 11.2

Turning the Index Lines Display ON and OFF 11.2

 Accessing the Index Lines Menu 11.3

Turning Index Lines ON and OFF 11.3

Listing the Currently Loaded Groups 11.3

 Index Line Editing 11.4

 Selecting the EDIT Mode 11.4

 Selecting a Line for Editing 11.4

 Changing the Bearing of Selected Line 11.5

 Changing the Range of Selected Line 11.5

 Changing the Line Type of Selected Line 11.5

 Clipping the Selected Line 11.6

 Removing Clipping from a Selected Line 11.7

 Index Group Editing 11.7

 Removing a Line from a Selected Group 11.7

 Removing ALL Lines from a Selected Group 11.7

 Adding a Line to a Selected Group 11.8

 Creating a New Group of Index Lines 11.8

 Loading and Unloading Groups 11.8

 Loading a New Group 11.8

 Unloading a Group 11.9

 Exiting from Edit Mode 11.10

 Saving a Group 11.10

Chapter 12 Tools

 Introduction 12.2

Contents

Accessing the TOOLS	12.2
Rotating Cursor.....	12.3
To Turn the Rotating Cursor ON or OFF.....	12.3
To Select HALF or FULL Circle Cursor.....	12.3
Marks	12.4
To Turn Marks ON or OFF	12.4
To CARRY or DROP Marks.....	12.4
To Add Marks.....	12.4
To DELETE Individual Marks	12.5
To DELETE ALL Marks.....	12.5
Constant Radius Turn	12.6
Radius Turn Menu.....	12.6
Setting the New Course	12.7
Setting the Turn Radius	12.8
Setting the Start Line.....	12.8
Aligning to Own Ship's Course.....	12.9
Rates of Turn	12.9
Standard Rate of Turn.....	12.9
Ship's Profile	12.10
Helicopter (Helo) Approach Sector	12.10
Accessing the HELO SECTOR Menu	12.11
Turning Helo Sector Display ON or OFF.....	12.11
Selecting TRUE or RELATIVE Display Mode	12.11
Selecting the Helo Sector BEARING	12.11
Selecting the Helo Sector ORIGIN.....	12.12
Selecting a Specific TARGET as Sector Origin.....	12.12
Sector Defaults and Suppression.....	12.13
Warning Prompts	12.13
Station Keeping.....	12.14
Accessing the STATION KEEPING Menu	12.14
Turning Station Keeping Display ON or OFF	12.14
Creating the Station Keeping Graphics.....	12.15
Removing a Line from a Displayed Graphic.....	12.16
Removing All Lines from a Displayed Graphic.....	12.16
Saving a Graphic To a Memory Card.....	12.17
Loading a Graphic from a Memory Card.....	12.17
Chapter 13 Alarms	
Introduction	13.2
Types of Alarm.....	13.2
Alarm Display.....	13.2
No Alarms	13.2
Unacknowledged Alarms	13.3
To Acknowledge an Alarm	13.3

Acknowledged Alarms	13.3
Alarm Facilities	13.3
The Alarm BUZZER	13.4
To Set the Watch Alarm Interval	13.4
List of Alarms	13.5
Chapter 14 System	
Introduction	14.2
Accessing the SYSTEM Facilities	14.2
Degaussing	14.3
To Degauss the Radar Monitor	14.3
Memory Card Facilities	14.3
Accessing the Memory Card Facilities	14.3
Card STATUS	14.4
File Management	14.4
Selecting a FILE TYPE	14.4
Deleting Files	14.5
Copying Files	14.5
To Rename a File	14.6
Moving a File	14.6
To Copy one Card to the Other	14.7
To Initialise a Card	14.7
Additional Facilities	14.8
Video Setting Facilities	14.8
NAV or SCOUT TX Setting Facilities	14.8
System Status Display	14.8
Test Data Facilities	14.8
Sector Transmission	14.9
Selecting Sector Transmission	14.10
Chapter 15 References	
Introduction	15.2
Soft Keys and Fixed Menus	15.2
Drop Down Menus	15.2
Selecting an Item from a Scrolled List	15.2
Drop Down Keypads	15.3
Numeric Keypads	15.3
Entering a Parameter Value	15.3
Correcting a Wrong Selection	15.4
Entering a Negative Value	15.4
Closing the Keypad	15.4
Memory Cards	15.5
Filenames and Alphanumeric Keypads	15.5
Memory Card Functions	15.6

Contents

Error	15.7
Help Line Warning Prompts	15.8
Selected List of Warning Prompts.....	15.8

Annex A **Search and Rescue (SART) Detection**

Introduction	A.2
Radar Range Scale.....	A.2
SART Range Errors	A.3
Radar Bandwidth	A.3
Radar Side Lobes	A.3
Detuning the Radar.....	A.3
Video Gain	A.4
Anti-clutter Sea Control.....	A.4
Anti-clutter Rain Control.....	A.4