

Thank you for purchasing this Factory Service Manual CD/DVD from servicemanuals4u.com.

Please check out our eBay auctions for more great deals on Factory Service Manuals:

servicemanuals4u

maintenance & service guide


Presario 1800 Series
Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

Pin Assignments

This chapter provides the pin assignments for the Presario 1800XL Series Notebook connectors. For more information on connectors or external ports, refer to [Rear Connectors](#) and [QuikDock Connectors](#).

Note: The signals in all tables of this chapter are considered active high unless otherwise indicated by an asterisk (*).

Parallel Connector

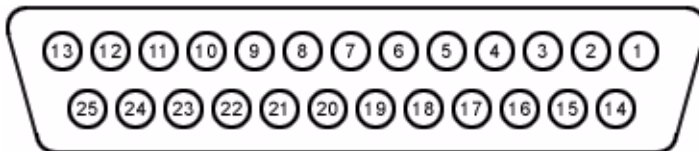

Pin	Signal	Pin	Signal
1	Strobe*	10	Acknowledge*
2	Data Bit 0	11	Busy
3	Data Bit 1	12	Paper Out
4	Data Bit 2	13	Select
5	Data Bit 3	14	Auto Linefeed*
6	Data Bit 4	15	Error*
7	Data Bit 5	16	Initialize Printer*
8	Data Bit 6	17	Select In*
9	Data Bit 7	18-25	Signal Ground


*Signal is active low.

maintenance & service guide

Presario 1800 Series

Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

Serial Connector

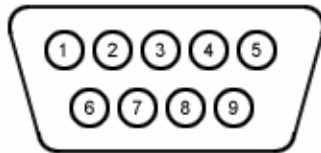

Pin	Signal	Pin	Signal
1	Carrier Detect	6	Data Set Ready
2	Receive Data	7	Ready to Send
3	Transmit Data	8	Clear to Send
4	Data Terminal Ready	9	Ring Indicator
5	Signal Ground		

Keyboard/Mouse Connector




Pin	Signal	Pin	Signal
1	Data 1	4	+5 V
2	Data 2	5	Clock 1
3	Ground	6	Clock 2

maintenance & service guide

Presario 1800 Series


Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

Modem Connector

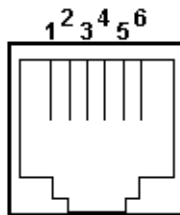

Pin	Signal	Pin	Signal
1	Unused	4	Unused
2	Tip	5	Unused
3	Ring	6	Unused

Game Port Connector

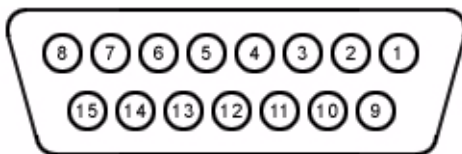


Pin	Signal	Pin	Signal
1	+5V	9	+5V
2	SWA	10	SWC
3	RBTA	11	RBTC
4	GND	12	RMSO
5	GND	13	RBTD
6	RBTB	14	SWD
7	SWB	15	RMSI
8	+5V		

maintenance & service guide

Presario 1800 Series

Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

External VGA Monitor Port

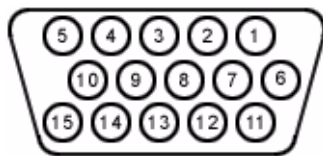

Pin	Signal	Pin	Signal
1	Red Analog	9	+5V
2	Green Analog	10	Ground
3	Blue Analog	11	Monitor Detect
4	Not connected	12	DDC2B Data
5	Ground	13	Horizontal Sync
6	Ground Analog	14	Vertical Sync
7	Ground Analog	15	DDC2B Clock
8	Ground Analog		

S-Video Connector



Pin	Signal	Pin	Signal
1	Ground	3	SYR
2	Ground	4	SCG

maintenance & service guide

Presario 1800 Series


Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

TV-Out (Composite Video) Connector



Pin	Signal	Pin	Signal
1	Ground	3	Ground
2	Composite		

Univeral Serial Bus (USB)

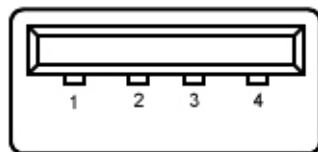


Pin	Signal	Pin	Signal
1	+5V	3	Data +
2	Data -	4	Ground

maintenance & service guide

Presario 1800 Series
Models: XL180, XL181, XL182, XL183, XL185,
and XL190, XL191, XL192

QuikDock Connector

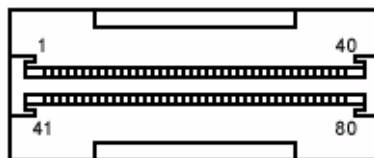

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	Adapter Power	22	Serial Port DCD	43	Keyboard Clock	64	Reserved
2	Adapter Power	23	Serial Port DSR	44	Keyboard Data	65	Headphone Sense
3	Adapter Power	24	Serial Port TXD	45	Mouse Clock	66	USB Power
4	Adapter Power	25	Serial Port RTS	46	Mouse Data	67	USB Power
5	Adapter Power	26	Monitor DDC	47	Lp Indicator	68	USB Power
6	Adapter Power	27	Monitor DDC	48	Lp Paper End	69	USB Power
7	Not Connected	28	Monitor Indicator	49	Lp Initialize	70	USB A-
8	Printer Data 0	29	V.SYNC	50	Lp Busy	71	USB A+
9	Printer Data 1	30	Ground	51	Lp Error	72	USB B-
10	Printer Data 2	31	H.SYNC	52	Lp Acknowledge	73	USB B+
11	Printer Data 3	32	Ground	53	Lp AutoFeed	74	5V
12	Printer Data 4	33	Blue	54	Lp Strobe	75	5V
13	Printer Data 5	34	Ground	55	Joystick Data A	76	Line Out Left
14	Printer Data 6	35	Green	56	Joystick Data B	77	S-Video SYR
15	Printer Data 7	36	Ground	57	Joystick Data C	78	Ground
16	Lp Select	37	Red	58	Joystick Data D	79	S-Video SCG
17	QuikDock Indicator	38	Ground	59	Switch A	80	Ground
18	Serial Port RXD	39	Composite TV-Out	60	Switch B		
19	Serial Port RI	40	Line Out Right	61	Switch C		
20	Serial Port DTR	41	Line Out Present	62	Switch D		
21	Serial Port CTS	42	Reserved	63	Reserved		