


# FIELD REPLACEABLE UNIT DOCUMENTATION

## Satellite™


### 4030/4060/4070/4080/4090/4100 Series

#### BATTERY PACK REMOVAL

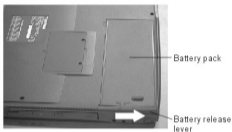

1. Turn the computer upside down as shown.
2. Slide the **battery release lever** in the direction of the arrow.
3. Pull the **battery pack** slightly forward and lift it out.

#### OPTIONAL PCMCIA CARD REMOVAL

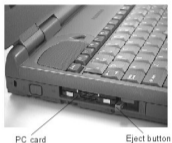

1. Pull out the **eject button** of the PC card to be removed.
2. Press the **eject button** and remove the **PC card**.

#### KEYBOARD REMOVAL



Keyboard holder

1. Open the display panel.
2. Unlatch the **Keyboard holder** at the five points and remove it.

#### KEYBOARD REMOVAL



Keyboard metal brace M2x4 brass screw


3. Remove **one M2x4 brass screw** and lift out the **keyboard metal brace**.

# TOSHIBA

Tough Enough for Today's World.

### 4030/4060/4070/4080/4090/4100 Series

#### KEYBOARD REMOVAL

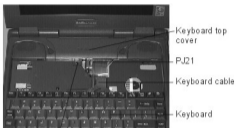

M2.5x4 black screw

1. Lift out the **Keyboard** and lay it on the palm rest. Be careful not to apply pressure on the **keyboard cable**.
2. Remove **one M2.5x4 black screw** and lift out the **keyboard top cover** between the speakers.
3. Disconnect the **Keyboard cable** from **PJ21** on the system board and remove the **Keyboard**.


#### HDD REMOVAL



HDD slot cover

1. Turn the computer upside down.
2. Remove **one M2.5x6 black screw** securing **HDD slot cover** and pull out the cover.

#### EXPANSION MEMORY REMOVAL

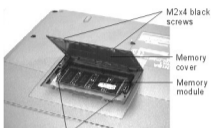

Memory clips

1. Turn the computer upside down.
2. Remove **two M2x4 black screws** and remove the **memory cover**.
3. Push the **memory clips** outward and pull the **memory module** out of the connector on a 45 degree angle.



HDD bracket handle

3. Remove **one M2.5x4 black screw** securing the HDD.
4. Grasp the **HDD bracket handle** and pull to disconnect the HDD.

# TOSHIBA

Tough Enough for Today's World.

**4030/4060/4070/4080/4090/4100 Series****MODEM REMOVAL**


Modem board

Modem cable    M2x3 silver screws    M2x5 brass screw

1. Remove **two M2x3 silver screws** and **one M2x5 brass screw** securing the modem board.
2. Lift up the right side of the **modem board** and remove it from the system board.
3. Disconnect the **modem cable** from PJ2 on the modem.

**TOP COVER REMOVAL**

M2x14 brass screws    FL cable    PJ4

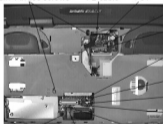

LCD cable

PJ3

Left speaker cable


PJ6

PJ7

Right speaker cable

M2 5x4 black screw    Membrane switch cable    PJ20

2. Turn the computer right side up and open the display panel.
3. Remove **two M2x14 black screws** and **one M2.5x4 black screw** securing the top cover.
4. Disconnect the following five cables:
  - LCD cable from PJ3
  - FL cable from PJ4
  - Membrane switch cable from PJ20
  - Left speaker cable from PJ6
  - Right speaker cable from PJ7

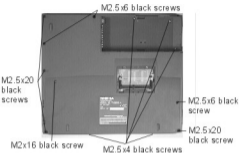**TOP COVER REMOVAL**

M2.5x6 black screws

M2.5x20 black screws

M2.5x6 black screw

M2.5x20 black screw

M2x16 black screw

M2.5x4 black screws

1. Turn the computer upside down and remove the following thirteen screws:
  - **4 M2.5x20 black screws**
  - **3 M2.5x6 black screws** (one from HDD slot cover)
  - **5 M2.5x4 black screws** from battery slot and back of the computer
  - **1 M2x16 black screw**



Top cover


Volume control

Display assembly

5. Lift up the back and left side of the top cover about 1 cm to release the left latch on the front (arrow1 and 2). Push to the right (arrow3) to clear the **volume control** from the top cover.
6. Rotate the top cover and **display assembly** forward to release the right latch.


**TOSHIBA**

Tough Enough for Today's World.

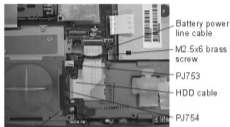**4030/4060/4070/4080/4090/4100 Series****HDD AND BATTERY BOARD REMOVAL**


HDD/battery board PJ750 Sensor cable

1. Remove tape securing the plastic insulator.
2. Disconnect the following cables from the **HDD/battery board**:
  - HDD cable from PJ754
  - Battery power line cable from PJ753
  - Sensor cable from PJ750
3. Remove **one M2.5x6 brass screw** and plastic brace.
4. Lift up the **HDD/battery board**.

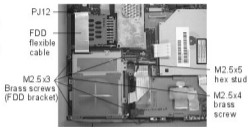**FDD REMOVAL**


FDD

1. Disconnect the **FDD flexible cable** from **PJ12** on the system board.
2. Remove **one M2.5x5 hex stud** and **one M2.5x4 brass screw** securing the FDD.
3. Remove **four M2.5x3 brass screws** securing the FDD to the FDD bracket.
4. Disconnect the **FDD flexible cable** from the FDD.

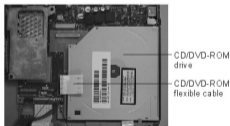**CD-ROM/DVD ROM DRIVE REMOVAL**

PJ17 M2.5x4 brass screw

1. Disconnect the **CD/DVD-ROM flexible cable** from **PJ17** on the system board.
2. Remove **one M2.5x4 brass screw** securing the CD/DVD-ROM drive.
3. Slide out the **CD/DVD-ROM drive**.

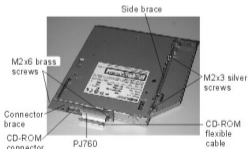

4. Remove **two M2x6 brass screws** securing the CD-ROM connector assembly.
5. Separate the **CD-ROM connector** and the **connector brace** from the CD-ROM drive.
6. Disconnect the **CD-ROM flexible cable** from **PJ760** on the CD-ROM connector.
7. Remove **two M2x3 screws** securing the **side brace**.

**TOSHIBA**

Tough Enough for Today's World.


**4030/4060/4070/4080/4090/4100 Series****CPU BOARD REMOVAL**

M2x14 brass screw

M2x4 brass screws  
Heat sink

Fan cable PJ11 Tape

1. Remove **tape** and disconnect the **fan cable** from **PJ11** on the system board.
2. Remove **two M2x4 screws** and **one M2x14 screw** securing the heat sink to the system board in the following order: **3-2-1**.
3. Lift out the **heat sink** from the front side.

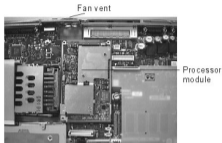

Fan vent

Processor module


4. Grip the **processor module** from the side opposite to the **fan vent** and pull it out from **PJ1** on the system board.

**COOLING FAN REMOVAL**

M2x4 flat head silver screws

Fan

1. Remove **two M2x4 flat head silver screws** securing the cooling fan.
2. Take out the **cooling fan** from the heat sink.

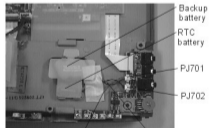**RTC AND BACKUP BATTERY REMOVAL**Backup battery  
RTC battery

PJ701

PJ702

RTC battery cable

Backup battery cable

1. Open the RTC and backup battery cover.
2. Disconnect the **RTC battery cable** from **PJ702** on the sound board.
3. Disconnect the **backup battery cable** from **PJ701** on the sound board.
4. Lift out the RTC and backup battery.

**TOSHIBA**


Tough Enough for Today's World.

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Satellite™

### 4030/4060/4070/4080/4090/4100 Series

#### SYSTEM BOARD REMOVAL

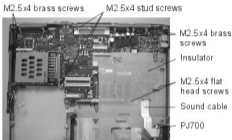

1. Remove the **insulator** and disconnect the **sound cable** from **PJ700** on the sound board.
2. Remove the following nine screws securing the system board and PC card slot cover:
  - 3 **M2.5x4 stud screws**
  - 4 **M2.5x4 brass screws**
  - 2 **M2.5x4 flat head brass screws**

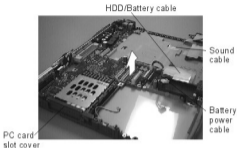


3. Lift out the system board at the front end and remove the **PC card slot cover**.
4. Disconnect the following cables from the system board:
  - **HDD/battery cable** from **PJ300**
  - **Battery power cable** from **PJ501**
  - **Sound cable** from **PJ302**

#### MEMBRANE SWITCH REMOVAL



1. Remove **two M2x4 brass screws** securing the membrane switch.
2. Lift out the **membrane switch**.


#### SPEAKERS REMOVAL

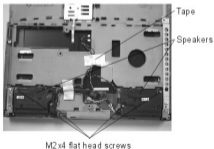


1. Remove **two M2x4 flat head screws** securing each speaker.
2. Remove the **tape** securing the speaker cables and lift out the **speakers**.

# TOSHIBA


Tough Enough for Today's World.

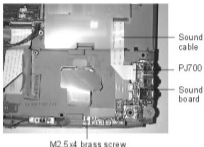**4030/4060/4070/4080/4090/4100 Series****SENSOR AND SOUND BOARD REMOVAL**

1. Disconnect the **sound cable** from **PJ700** on the sound board.
2. Remove **one M2.5x4 brass screw** securing sound board.
3. Lift out the **sound board**.

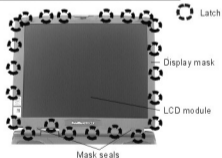**13.3 TFT DISPLAY MASK REMOVAL**

1. Remove **two mask seals** at the bottom corners of the display assembly.
2. Remove **two M2.5x6 brass screws**.
3. There are **22 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

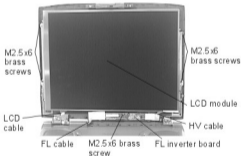**FL INVERTER AND 13.3 TFT LCD REMOVAL**

1. Remove tape and **one M2x5 brass screw** securing FL inverter board.
2. Carefully lift up the **FL inverter board** and disconnect the **FL inverter cable** from **CN1** and the **HV cable** from **CN2**.
3. Remove **four M2.5x6 brass screws** securing the LCD module.
4. Carefully rotate the **LCD module** from right to left of the LCD cover.
5. Disconnect the **LCD cable** from the LCD module and remove the **LCD** from the computer.

**TOSHIBA**


Tough Enough for Today's World.

# FIELD REPLACEABLE UNIT DOCUMENTATION

## Satellite™


### 4030/4060/4070/4080/4090/4100 Series

#### 13.3 DSTN DISPLAY MASK REMOVAL

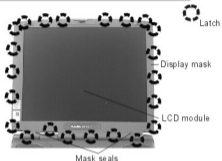

1. Remove **two mask seals** at the bottom corners of the display assembly.
2. Remove **two M2.5x6 brass screws**.
3. There are **22 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

#### FL INVERTER AND 13.3 DSTN LCD REMOVAL

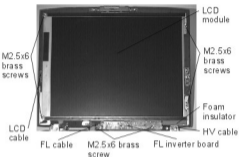


1. Remove **two M2x5 brass screw** securing FL inverter board.
2. Carefully **lift up the FL inverter board** and disconnect the **FL inverter cable** from **CN1**. Remove the **foam insulator** on the **HV cable** and disconnect the **HV cable** from **CN2**.
3. Remove **four M2.5x6 brass screws** securing the LCD module.
4. Carefully rotate the **LCD module** from right to left of the LCD cover.
5. Disconnect the **LCD cable** from the LCD module and remove the **LCD** from the computer.


# TOSHIBA

Tough Enough for Today's World.

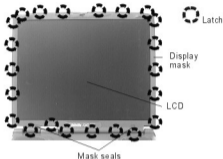

**4030/4060/4070/4080/4090/4100 Series****14.1 TFT DISPLAY MASK REMOVAL**

1. Remove **two mask seals** at the bottom corners of the display assembly.
2. Remove **two M2.5x6 brass screws**.
3. There are **22 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

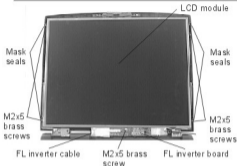**FL INVERTER AND 14.1 TFT LCD REMOVAL**

1. Remove **one M2x5 brass screw** securing FL inverter board.
2. Carefully lift up the **FL inverter board** and disconnect the **FL inverter cable** from **CN1** and the **HV cable** from **CN2**.
3. Remove **four mask seals** to expose four screws securing the **LCD module**.
4. Remove **four M2X5 brass screws** securing the **LCD module**.
5. Carefully rotate the **LCD module** from right to left of the LCD cover.
6. Disconnect the **LCD cable** from the LCD module and remove the **LCD** from the computer.

**TOSHIBA**

Tough Enough for Today's World.