## 2004 > G 2.0 DOHC > Body (Interior and Exterior)



# **REMOVAL AND INSTALLATION**


### **DOOR AREA**

1. Remove the trims.

#### NOTE

- -Put on gloves to protect your hands.
- -When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- -Take care not to bend or scratch the trim and panels.
- 2. Installation is the reverse of removal.

- -Replace any damage clips.
- -Apply liquid thread lock to the front seat belt upper anchor bolt befor installation.
- -Before installing the anchor bolts, make sure there are ot twists or kinks in the belts.

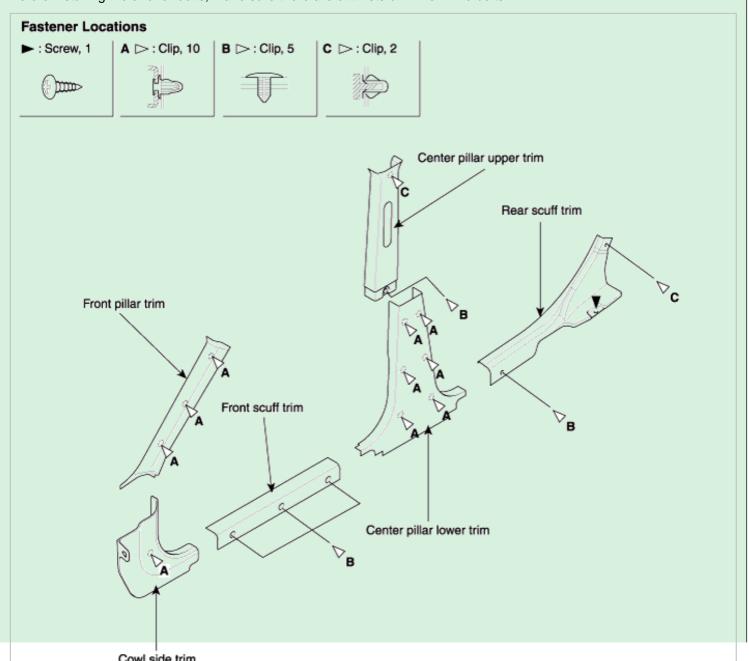

Cowl side trim


## **REAR SHELF AREA**

 
1. Remove the trims.

## NOTE

- -Put on gloves to protect your hands.
- -When prying with a flat-tip screwdriver, wrap it protective tape to prevent damage.
- -Take care not to bend or scratch the trim and panels.
- 2. Installation is the reverse of removal.

- -Replace any damage clips.
- -Apply liquid thread lock to the front seat belt upper anchor bolt before installation.
- -Before installing the anchor bolts, make sure there are not twists or kinks in the belts.

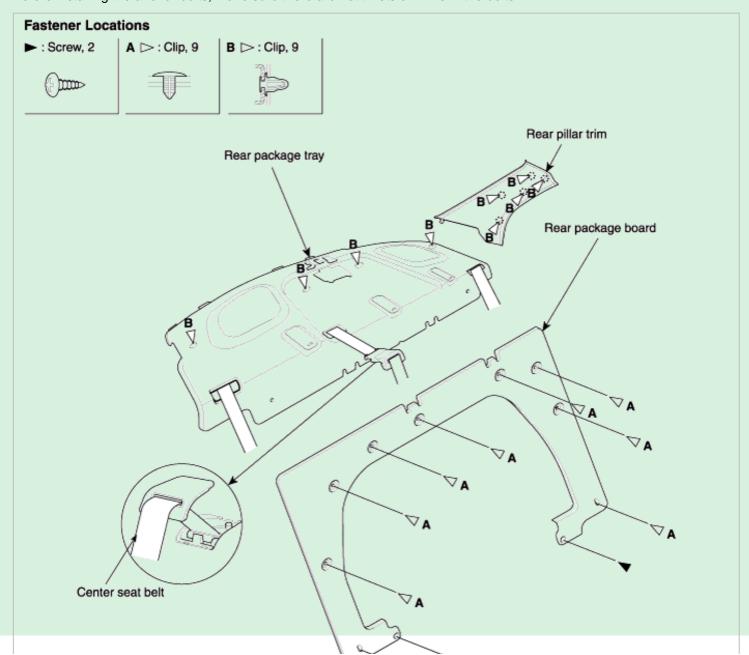




## **TRUNK AREA**

1. Remove the trims.


## NOTE

- -Put on gloves to protect your hands.
- -When prying with a flat-tip screwdriver, wrap it protective tape to prevent damage.
- -Take care not to bend or scratch the trim and panels.
- 2. Installation is the reverse of removal, and replace any damaged clips.

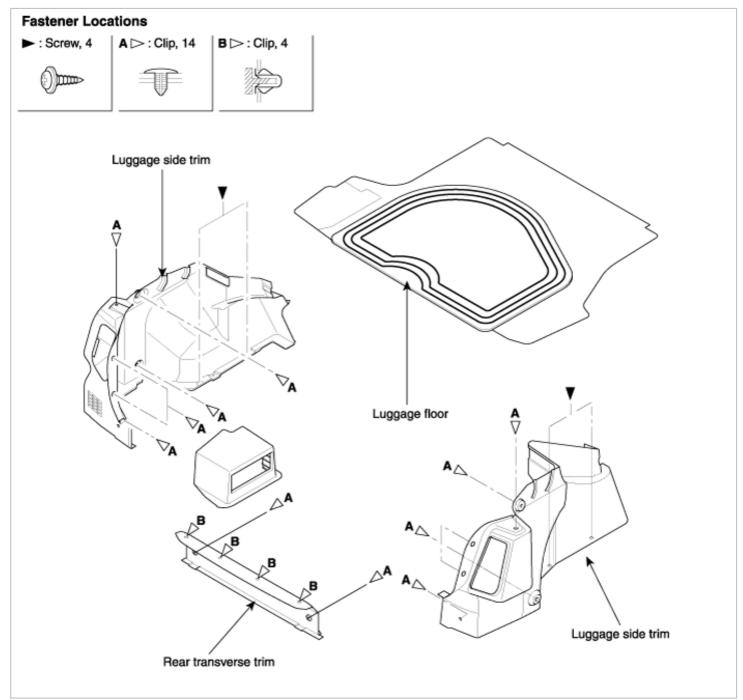


# **HEADLINER REMOVAL AND INSTALLATION**


- -When prying with a flat-tip screwdriver, wrap it protective tape to prevent damage.
- -Take care not to bend and scratch the headliner.
- -Be careful not to damage the dashboard and other interior trim.
- 1. Remove the following items (see page BD- 63).
  - A. Front pillar trim (both sides)
  - B. Front seat belt upper anchor bolt (both sides)
  - C. Front and rear scuff trim (see page BD-).
  - D. Center pillar lower and upper trim (see page BD-).
  - E.Rear pillar trim (see page BD-).
- 2. Remove the sunvisor (A) and holder (B) from each side.

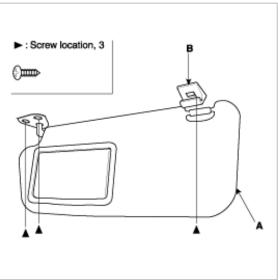

- 3. Remove the overhead console and room lamp.
  - A. Remove the lens (A).
  - B.Remove the screws.
  - C. Pull out the roof console (B), and room lamp (C).
  - D. Disconnect the connector (D).

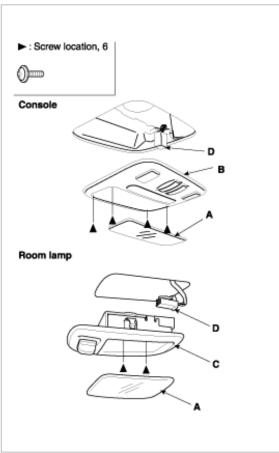


4. Remove the caps (A), and remove the screws and washers, then remove the grab handles (B) (drivers and each passengers)

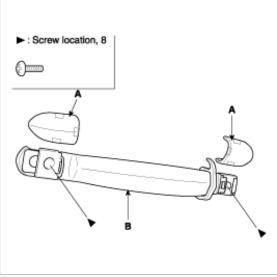

- 5. Remove the headliner.
  - A.Remove the upper portion of the rear pillar trim (A) from each side.
  - B. With help of an assistant, detach the clips, and lower the headliner (B).

C. Remove the headliner through the front passengers door opening.

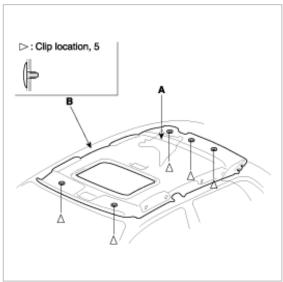

6. Installation is the reverse of removal.


## NOTE

- -When reinstalling the headliner through the door opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- -If the threads on a visor or grab handle screws are worn out, use an oversized screw made specifically for this application.
- -Check that both sides of the headliner are securely attached to the trim.

#### CARPET REPLACEMENT

- -Put on gloves to protect you hands.
- -Take care not to damage, wrinkle or twist the carpet.
- -Be careful not to damage the dashboard or other interior trim pieces.
- 1. Remove the following items:
  - A. Front seats, both sides (see page BD- 84).
  - B. Console (see page BD-53).
  - C. Rear seat cushion (see page BD-89).
  - D. Front seat belt anchor bolt, both sides (see page BD- 96).
  - E. Front door scuff trim (see page BD- 63).
  - F. Rear door scuff trim (see page BD- 63).
  - G. Center pillar lower trim panel (see page BD- 63).

2. Remove the footrest (A).

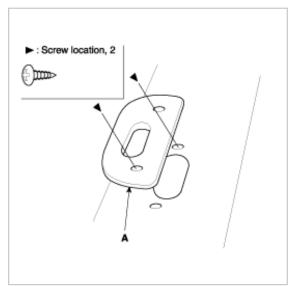

3. Remove the clips and fasteners, then remove the carpet (A). Put on gloves to protect your hands.



4. Installation is the reverse of removal.

- -Take care not to damage, wrinkle or twist the carpet.
- -Make sure the seat harness is routed correctly.
- -Replace any damaged clips.