





INSPECTION

1. Remove the sunroof motor (A) after removing 3 screws and disconnect the 9P connector (B) from the sunroof motor.

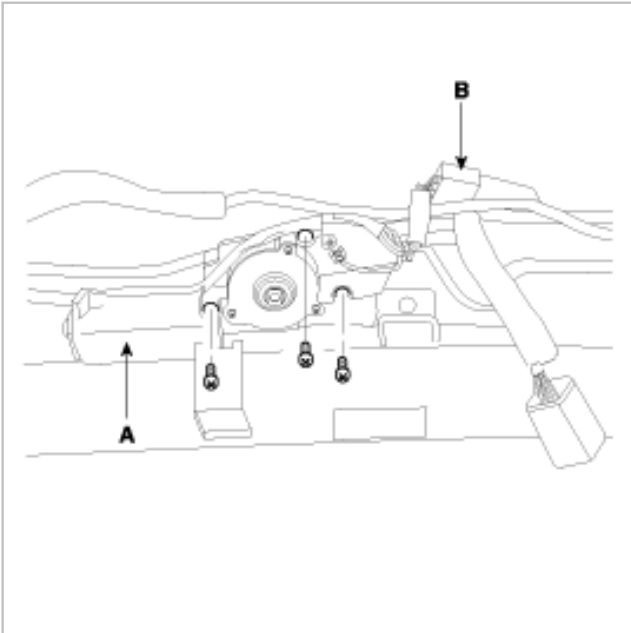

2. Connect the positive (+) lead from the battery to terminal 8 and the negative (-) lead to terminal 3. Check that the motor turns counter-clockwise.

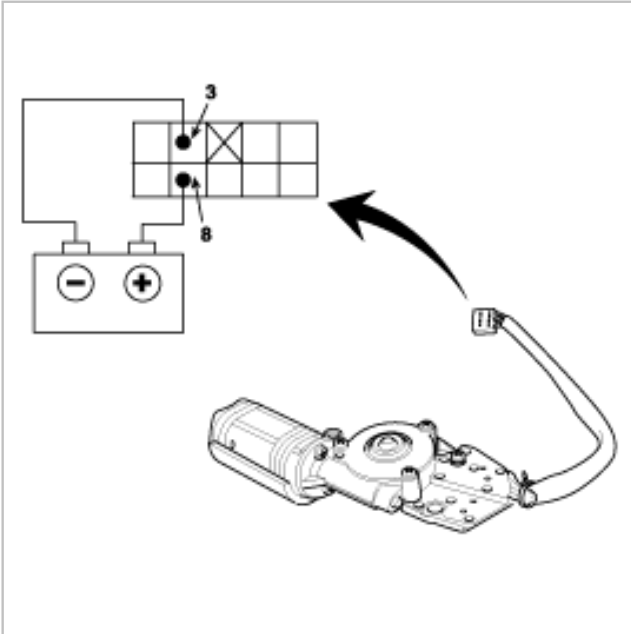

3. Reverse the polarity, check that the motor turns clockwise.
If operation is not as specified, replace the motor.

