




**COMPONENTS**

[ H220 ]




ETKA010A

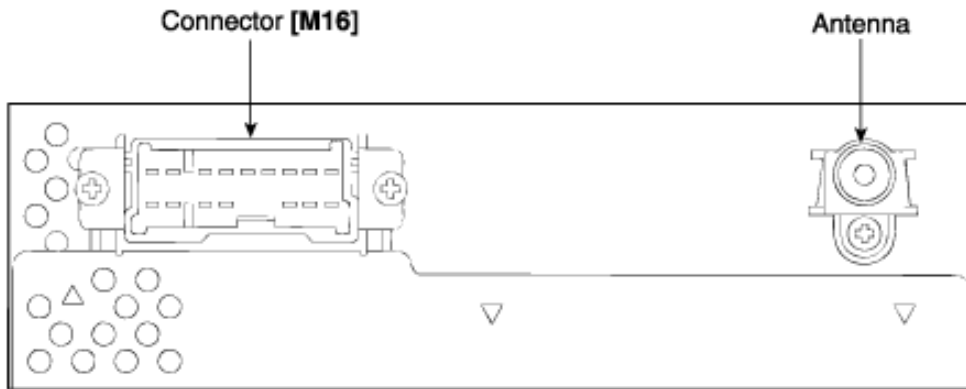


ETKA010B

Connector [M16]	Terminal	Description
<p>ETJA001C</p>	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)


[ H240 ]

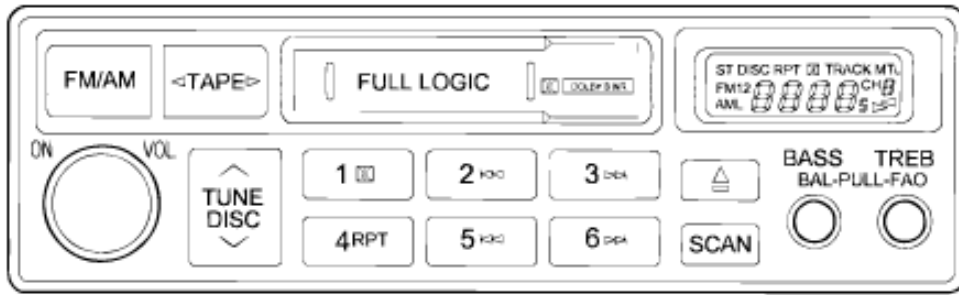


ETJA001B

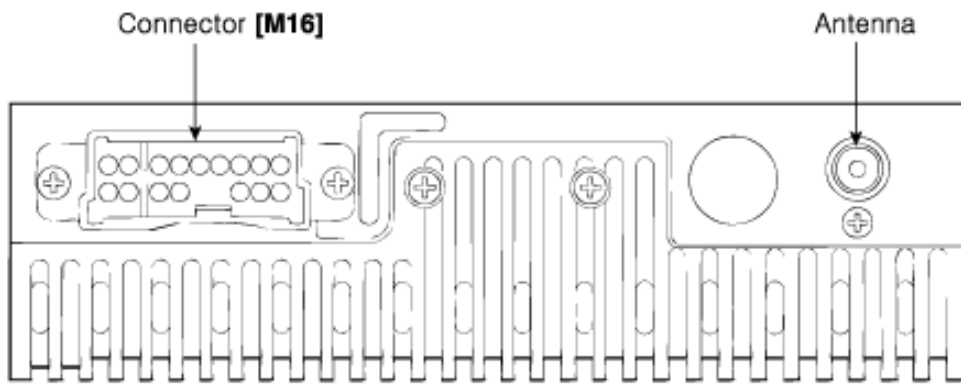


ETJA001A

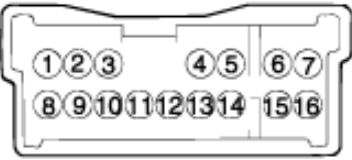Connector [M16]	Terminal	Description
 <p>ETJA001C</p>	1	Antenna
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)

[H260]

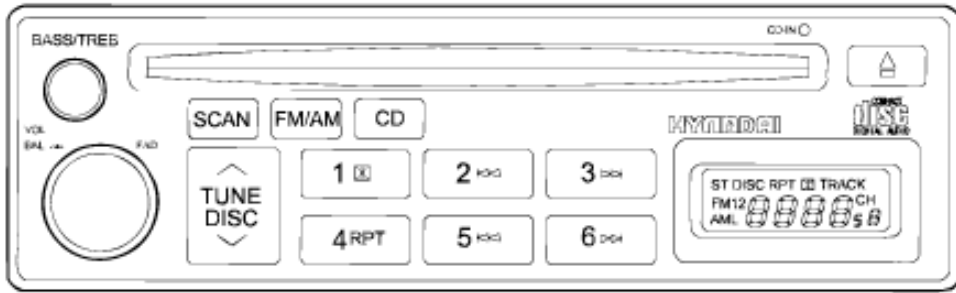

ETJA001E

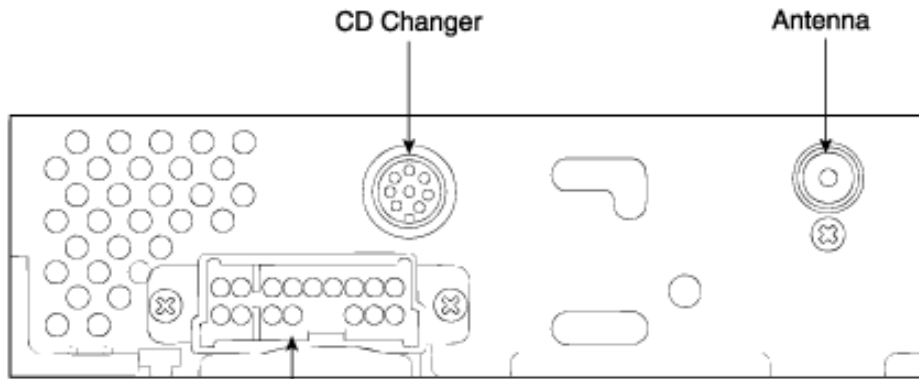


ETJA001D

Connector [M16]


Connector [M16]	Terminal	Description
<p>ETJA001C</p>	1	N.C.
	2	Rear left speaker(-)
	3	Front left speaker(-)
	4	Front right speaker(-)
	5	Rear right speaker(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left speaker(+)
	10	Front left speaker(+)
	11	N.C.
	12	N.C.
	13	Front right speaker(+)
	14	Rear right speaker(+)
	15	Illumination(+)
	16	Battery(+)

Connector	Terminal	Description
<p>ETJA001G</p>	1	R
	2	CD ON
	3	BUS
	4	B+
	5	M. Ground
	6	N.C.
	7	L
	8	A.Ground

[ H290 ]

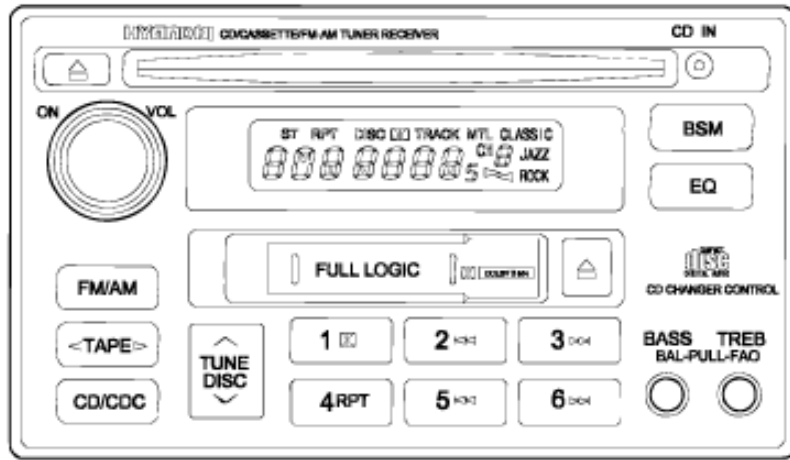

ETJA0011

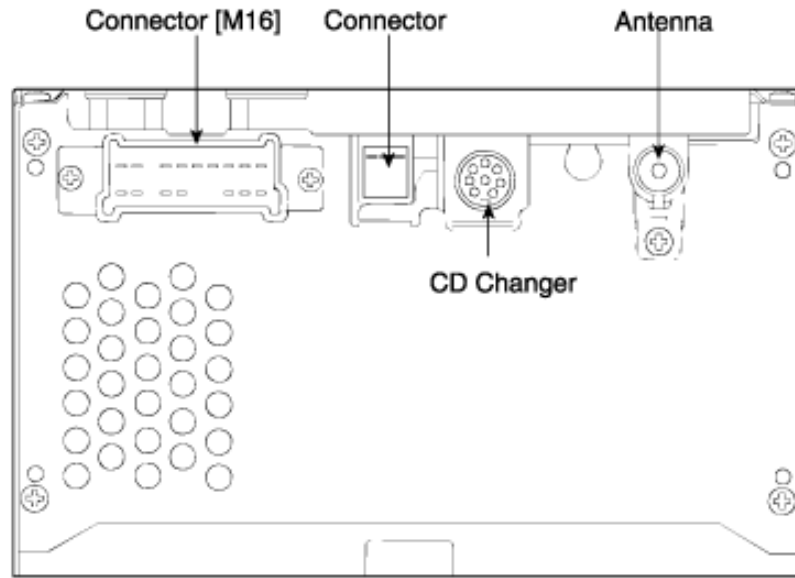

ETJA001H

Connector[M16]	Terminal	Description
<p>ETJA001C</p>	1	Antenna
	2	Rear left amp(-)
	3	Front left amp(-)
	4	Front right amp(-)
	5	Rear right amp(-)
	6	Illumination(-)
	7	ACC(+)
	8	Ground
	9	Rear left amp(+)
	10	Front left amp(+)
	11	N.C.
	12	Amp remote
	13	Front right amp(+)
	14	Rear right amp(+)
	15	Illumination(+)
	16	Battery(+)

Connector	Terminal	Description
<p>ETJA001K</p>	1	Ground
	2	Signal
	3	Ground

Connector	Terminal	Description
<p>ETJA001G</p>	1	R
	2	CD ON
	3	BUS
	4	B+
	5	M. Ground
	6	N.C.
	7	L
	8	A.Ground