




REMOVAL

1. Disconnect the negative (-) battery terminal.
2. Remove the license plate lamp (A) after removing 2 screws(B).

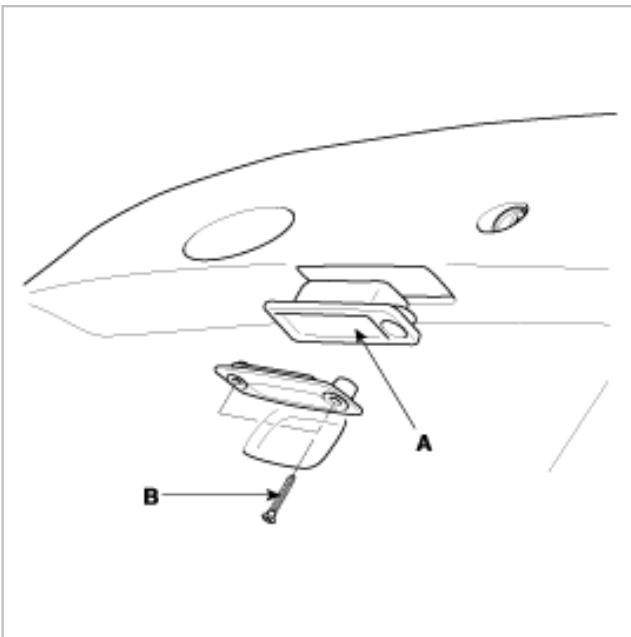

3. Replace the bulb.
4. Installation is the reverse of removal.