




## INSPECTION

### POWER WINDOW MAIN SWITCH

1. Remove the power window main switch from the driver's door trim panel.

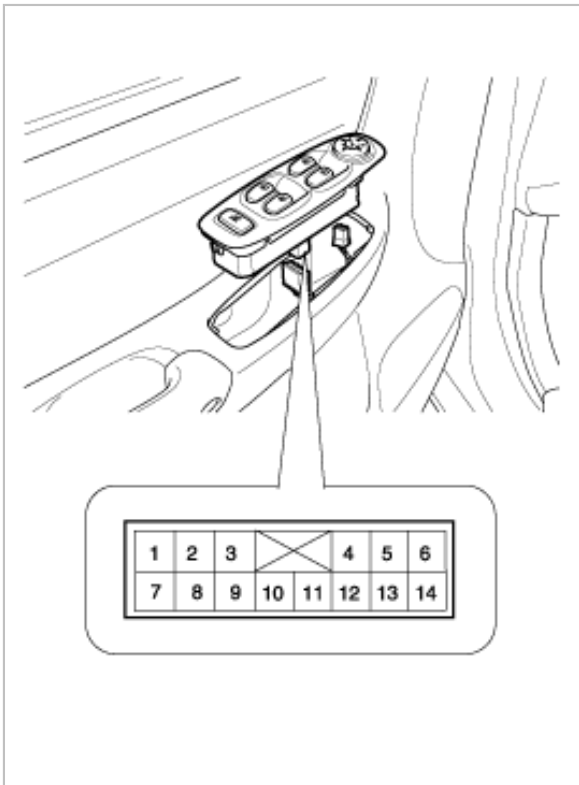

2. Check for continuity between the terminals.


Terminal Position	Front left				Front right				Rear left				Rear right			
	11	5	6	10	11	2	4	10	11	9	12	10	11	7	8	10
UP	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
OFF		○	○	○		○	○	○		○	○	○		○	○	○
DOWN	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

### POWER WINDOW LOCK SWITCH

Terminal Position	1	11
NORMAL	○	○
LOCK		

### POWER WINDOW SUB SWITCH

1. Remove the power window sub switch from the rear door trim panel.

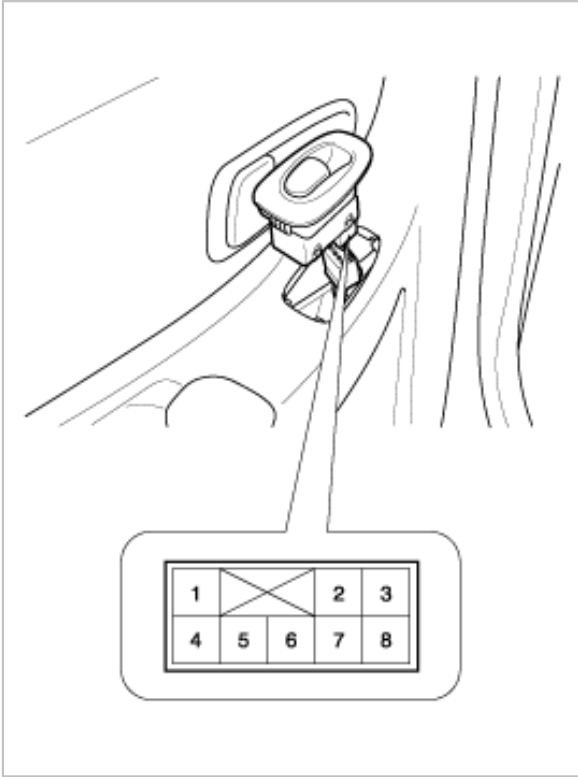

2. Check for continuity between the terminals.

If continuity is not as specified in the table, replace the power window switch.

Terminal Position \	1	3	4	6	8
UP	○	○	○	○	○
OFF	○	○	○	○	○
DOWN	○	○	○	○	