




INSPECTION

1. Remove the negative(-) battery terminal.
2. Disconnect the air control module connector(23P) and check for continuity between the terminals.

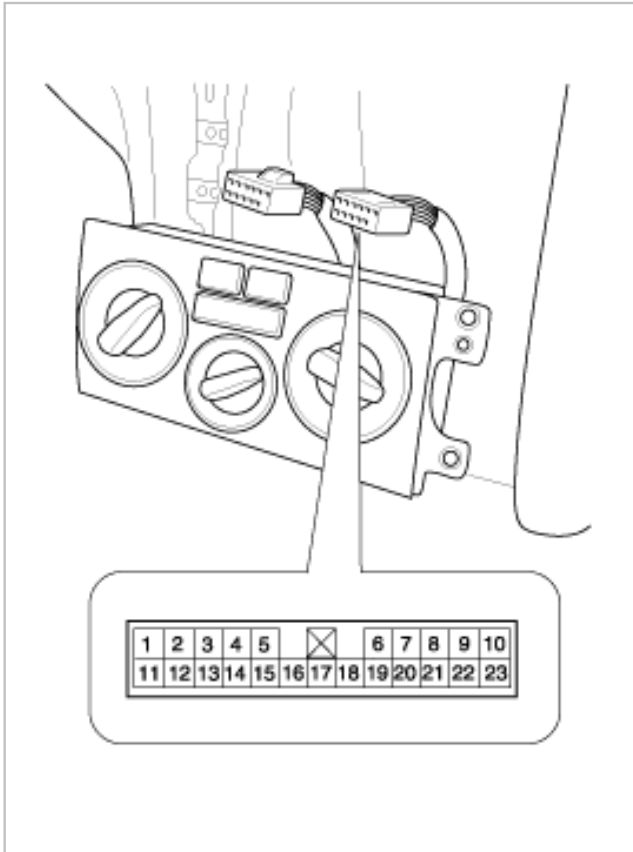

[M20]

Terminal Position	19	3	18
ON	○	○	○ IND ○
OFF		○	○ IND ○