





COMPONENTS

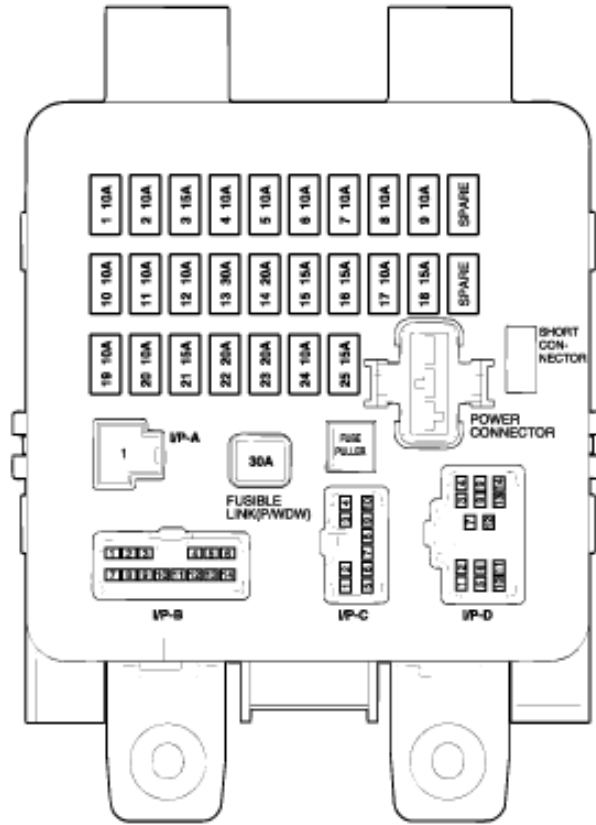

[FRONT]

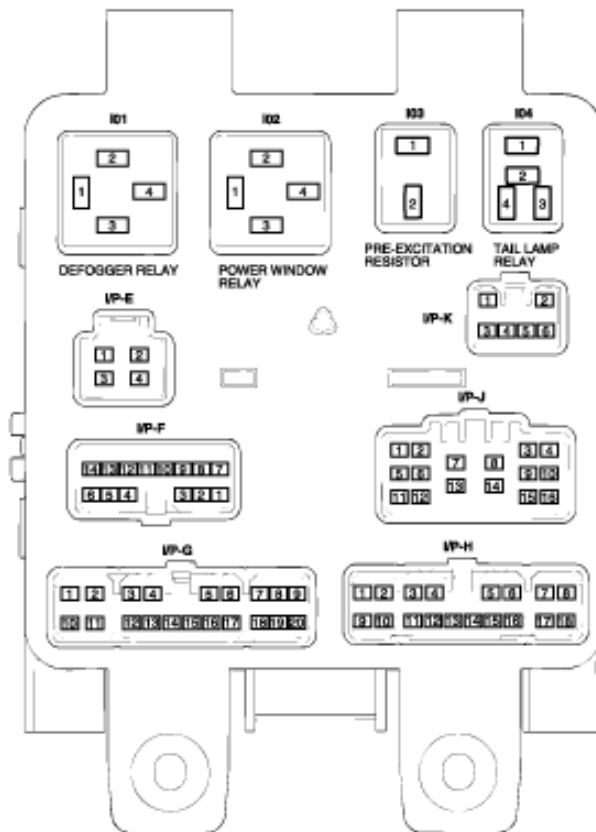

[REAR]

Description	No.	Amperages	Circuit protected
FUSE	1	10A	Turn signal lamps, Back-up lamp switch
	2	10A	Pre-excitation resistor, Instrument cluster(IND), Auto lights control
	3	15A	SRS control
	4	10A	Hazard relay, Hazard lamps
	5	10A	A/C control
	6	10A	Short connector, Illumination lamps, Tail lamp (RH)
	7	10A	Tail lamp (LH), Exterior lamps
	8	10A	B/Alarm relay
	9	10A	Digital clock, Power outside mirror switch, Audio
	10	10A	Cruise control, PCM, Vehicle speed sensor
	11	10A	ABS control
	12	10A	Instrument cluster (Air bag IND.)
	13	30A	Defogger relay
	14	20A	Power antenna
	15	15A	Door lock control module, Sunroof, Driver door unlock relay
	16	15A	Stop lamp switch, Power window relay
	17	10A	Rear window & outside mirror defogger, A/C control
	18	15A	Cigarette lighter, Power outlet
	19	10A	Not used
	20	10A	Head lamp, DRL
	21	15A	Rear wiper & washer
	22	20A	Front wiper & washer
	23	20A	Not used
	24	10A	Blower & A/C, ETACM, Sunroof controller, Electronic chrome mirror
	25	15A	Door lamps, Instrument cluster, Data link connector, Multipurpose check connector, Room lamps, ETACM, Audio, Power connector
Fusible Link	P/WDW	30A	Power window relay

RELAY BOX

