
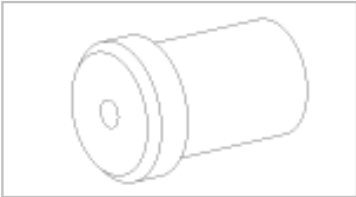
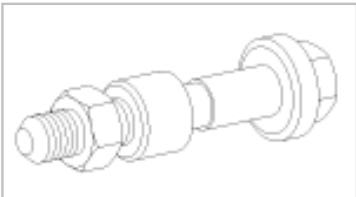
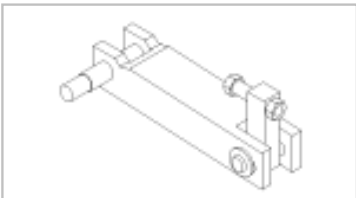
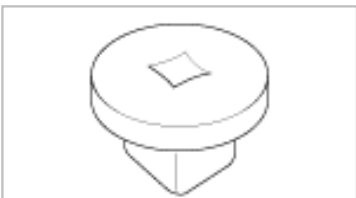






SPECIAL TOOLS

Tool (Number and Name)	Illustration	Use
09495-33000 Puller		Removal of wheel bearing inner race from a hub.
09495-33100 Center bearing remover and installer		<ol style="list-style-type: none"> 1. Removal of a wheel bearing from a knuckle. (use with 09517-29000) 2. Installation of a hub to a knuckle.
09517-21500 Front hub remover and installer		<ol style="list-style-type: none"> 1. Removal of a front hub from a knuckle. (use with 09517-29000) 2. Measurement of a front wheel bearing pre-load (use with 09532-11600)
09517-29000 Knuckle arm bridge		<ol style="list-style-type: none"> 1. Removal of a front hub from a knuckle. (use with 09517-21500) 2. Removal of a wheel bearing outer race from a knuckle. (use with 09495-33100)
09532-11600 Preload socket		Measurement of a front wheel bearing pre-load. (use with 09517-21500)
09532-31200A Oil seal installer		Installation of a wheel bearing to knuckle.
09568-34000 Ball joint puller		Separation of a lower arm and a tie rod end ball joint.