



TROUBLESHOOTING

Symptom	Suspect area	Remedy (See page)
Engine will not start or hard to start	Vacuum hose disconnected or damaged	Repair or replace
	Malfunction of the EVAP Canister Purge Solenoid Valve	Repair or replace (EC-14)
Rough idle or engine stalls	Vacuum hose disconnected or damaged	Repair or replace
	Malfunction of the PCV valve	Replace (EC-9)
	Malfunction of the evaporative emission canister purge system	Check the system; if there is a problem, check related components parts (EC-13)
Excessive oil consumption	Positive crankcase ventilation line clogged	Check positive crankcase ventilation system (EC-9)