

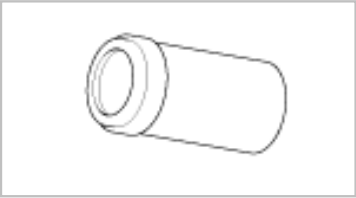
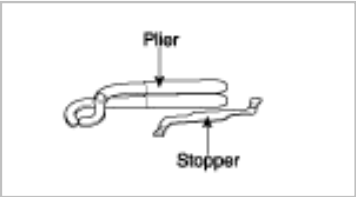


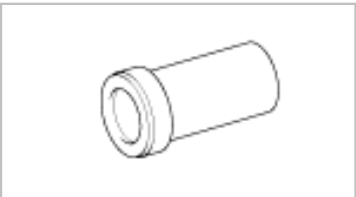

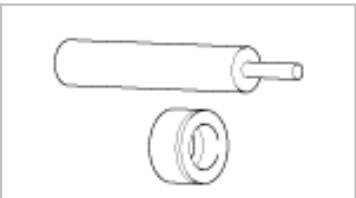


## SPECIAL TOOLS

Tool (Number and name)	Illustration	Use
Crankshaft front oil seal installer (09214-33000)		Installation of the front oil seal
Valve clearance adjust tool set (09220-2D000)		Removal and installation of the tappet shim
Camshaft oil seal installer (09221-21000)		Installation of the camshaft oil seal
Valve guide installer (09221-3F100 A/B)		Remove and installation of the valve guide
Valve stem oil seal installer (09222-22001)		Installation of the valve stem oil seal
Valve spring compressor & adaptor (09222-28000, 09222-28100)		Removal and installation of the intake or exhaust valve
Crankshaft rear oil seal installer (09231-21000)		<ol style="list-style-type: none"> <li>1. Installation of the engine rear oil seal</li> <li>2. Installation of the crankshaft rear oil seal</li> </ol>