



SRSCM CONNECTOR

DAB+PAB+SAB+BPT

25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●								

75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51
●	●	●	●		●	●	●	●	●									●	●	●	●	●	●	

PIN NO.	FUNCTION	INPUT/OUTPUT
1	Not used	-
2 ~ 25	Shorting bar	-
26 ~ 32	Not used	-
33	Passenger side airbag, Low	Output
34	Passenger side airbag, High	Output
35	Driver side airbag, Low	Output
36	Driver side airbag, High	Output
37	Passenger belt pretensioner, Low	Output
38	Passenger belt pretensioner, High	Output
39	Driver belt pretensioner, Low	Output
40	Driver belt pretensioner, High	Output
41	Passenger airbag 2nd, Low	Output
42	Passenger airbag 2nd, High	Output
43	Driver airbag 2nd, Low	Output
44	Driver airbag 2nd, High	Output
45	Passenger airbag 1st, Low	Output
46	Passenger airbag 1st, High	Output
47	Driver airbag 1st, Low	Output
48	Driver airbag 1st, High	Output

49	Warning lamp	Output
50	Ground	Input
51	Not used	-
52	Passenger side impact sensor, Low	Input
53	Passenger side impact sensor, High	Input
54	Driver side impact sensor, Low	Input
55	Driver side impact sensor, High	Input
56	Front impact sensor, Low	Input
57	Front impact sensor, High	Input
58 ~ 65	Not used	-
66	Passenger seat track position sensor	Input
67	Driver seat track position sensor	Input
68	Passenger seat buckle switch	Input
69	Driver seat buckle switch	Input
70	Occupant classification	Input
71	Not used	-
72	Crash output	Output
73	K-diagnostic line	Input/output
74	Not used	-
75	Battery supply	Input