




COMPONENTS

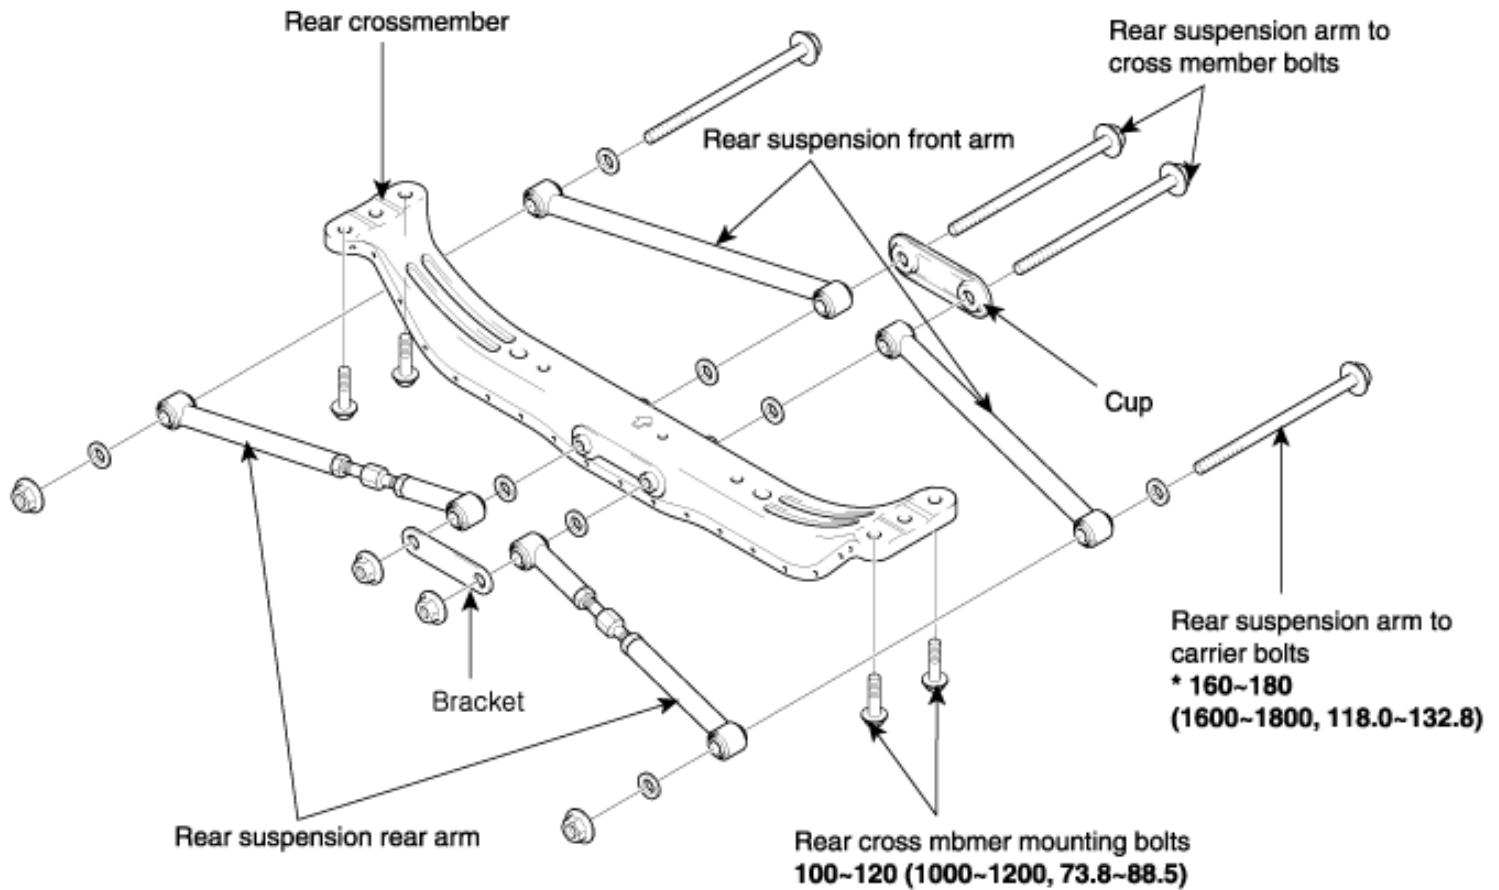

CAUTION

The parts marked '*' should be temporarily tightened, and then fully tightened with the vehicle on the ground in unloaded condition.

TORQUE : N·m (kgf·cm, lbf·ft)