
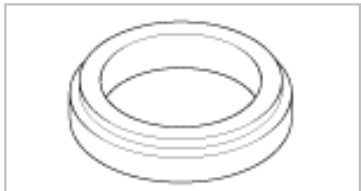
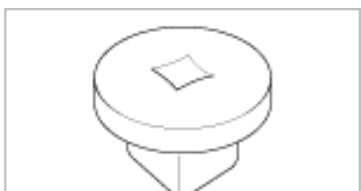
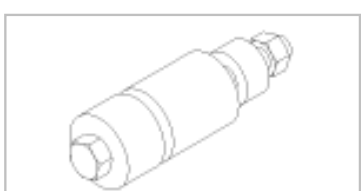



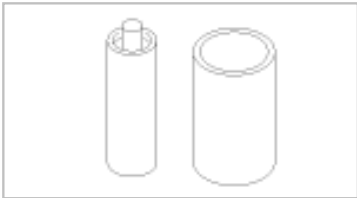








SPECIAL TOOLS

Tool (Number and Name)	Use	Illustration
09216-21000 Mount bushing remover and installer		Removal & installation of lower arm bushing (G) (Use with 09216-21200, 09545-02000)
09216-21200 Mount bushing remover and installer base		Removal & installation of the lower arm bushing (G) (Use with 09216-21100, 09545-02000)
09532-11600 Preload socket		Measurement of the lower arm ball joint & stabilizer link starting torque
09545-02000 Lower arm bushing remover and installer		Removal & installation of the lower arm bushing (G) (Use with 09216-21100, 09216-21200)
09545-11000 Ball joint remover and installer		Installation of the lower arm ball joint
09545-21100 Ball joint dust cover installer		Installation of the lower arm ball joint dust cover

<p>09551-25000 Trailing arm bushing remover and installer</p>		<p>Removal & installation of the trailing arm bushing</p>
<p>09551-25000 Rear suspension arm remover and installer</p>		<p>Removal & installation of the rear suspension arm bushing (Use with 09545-28100)</p>
<p>09568-34000 Ball joint puller</p>		<p>Separation of the lower arm ball joint</p>
<p>A-20 Strut compressor adapter</p>		<p>Compression of the rear coil spring (Use with J38402)</p>
<p>A-50 Strut compressor adapter</p>		<p>Compression of the front coil spring (Use with J38402)</p>
<p>J38402 Strut spring compressor</p>		<p>Compression of the front & rear coil spring (Use with A-50 or A-20)</p>