COMPONENTS

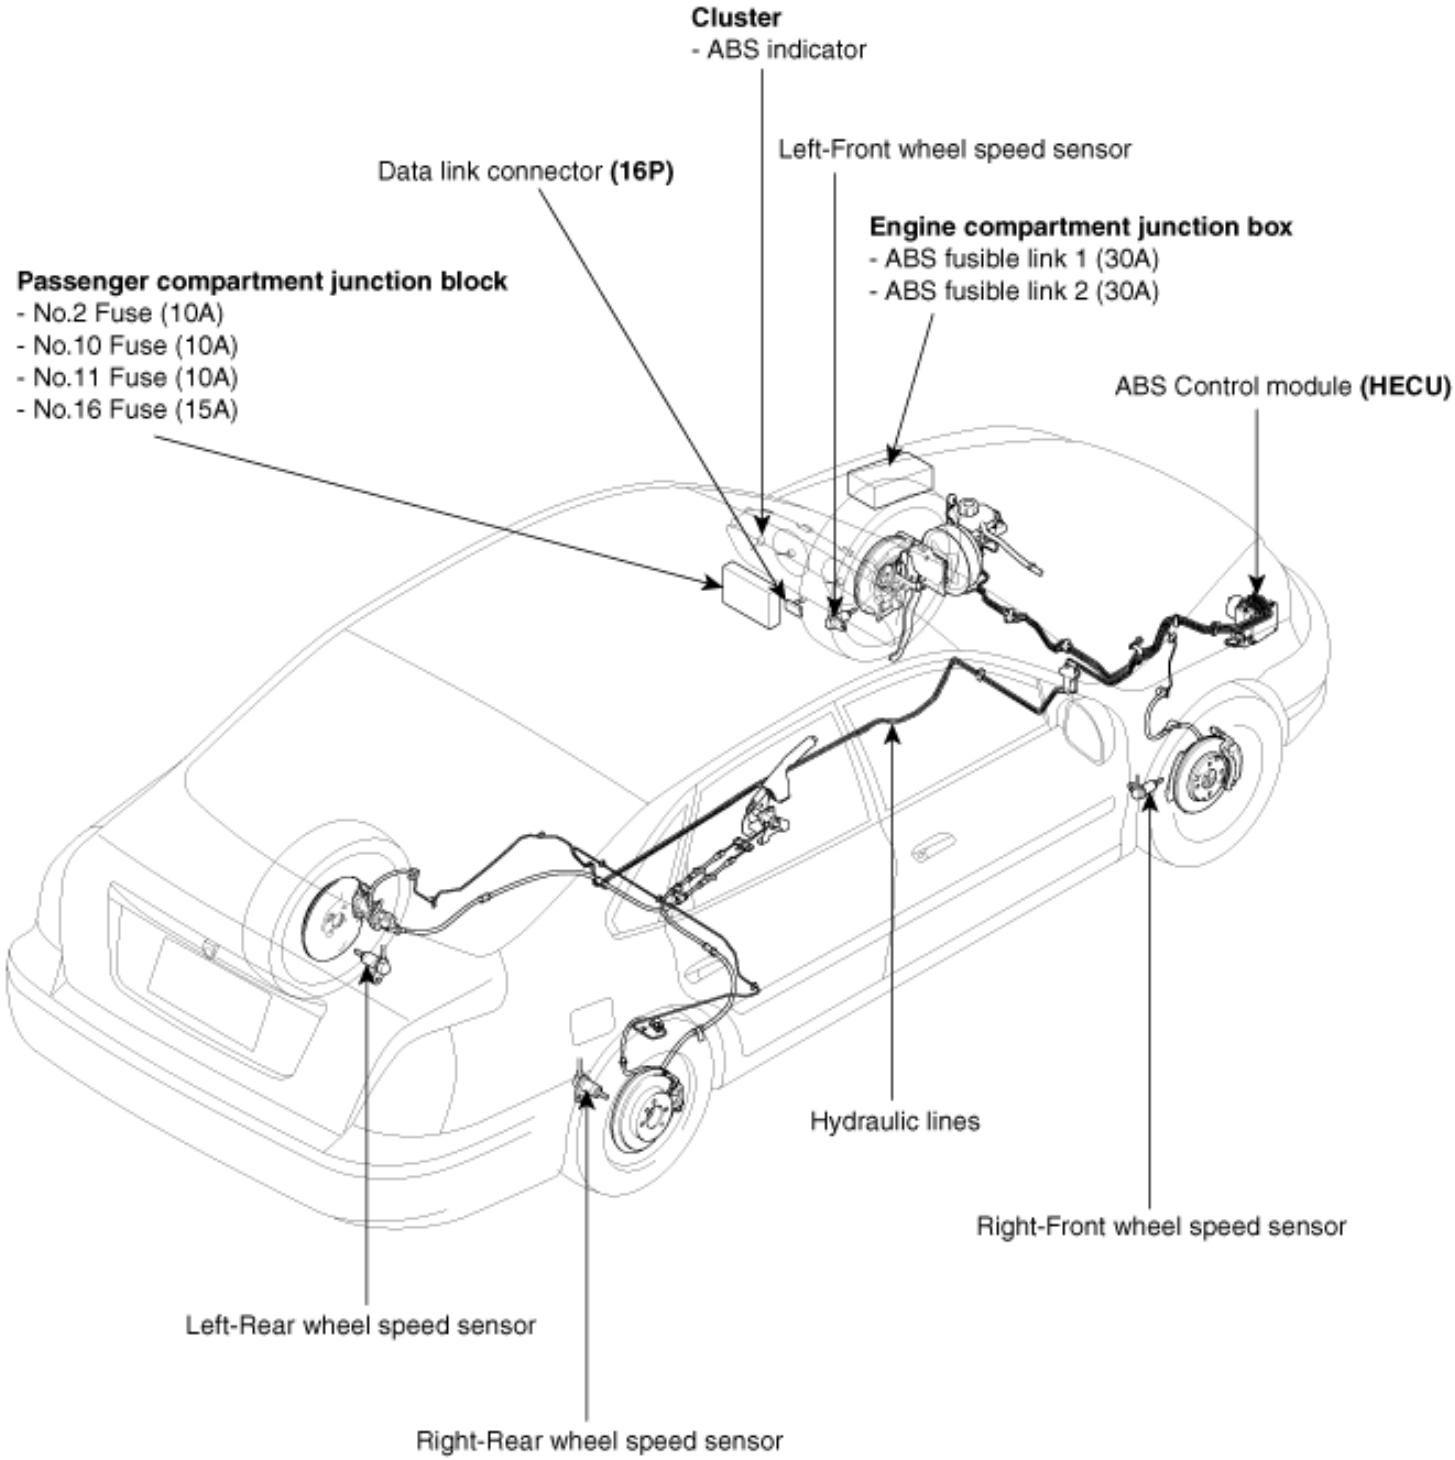
Cluster
- ABS indicator
Left-Front wheel speed sensor
Data link connector (16P)
Engine compartment junction box
- ABS fusible link 1 (30A)
- ABS fusible link 2 (30A)
Passenger compartment junction block
- No.2 Fuse (10A)
- No.10 Fuse (10A)
- No.11 Fuse (10A)
- No.16 Fuse (15A)
ABS Control module (HECU)
Hydraulic lines
Right-Front wheel speed sensor
Left-Rear wheel speed sensor
Right-Rear wheel speed sensor