



**Product:** BridgeMaster E Series Radars

**Subject:** Fitting of Flash (Software) PCBs V3.xx series

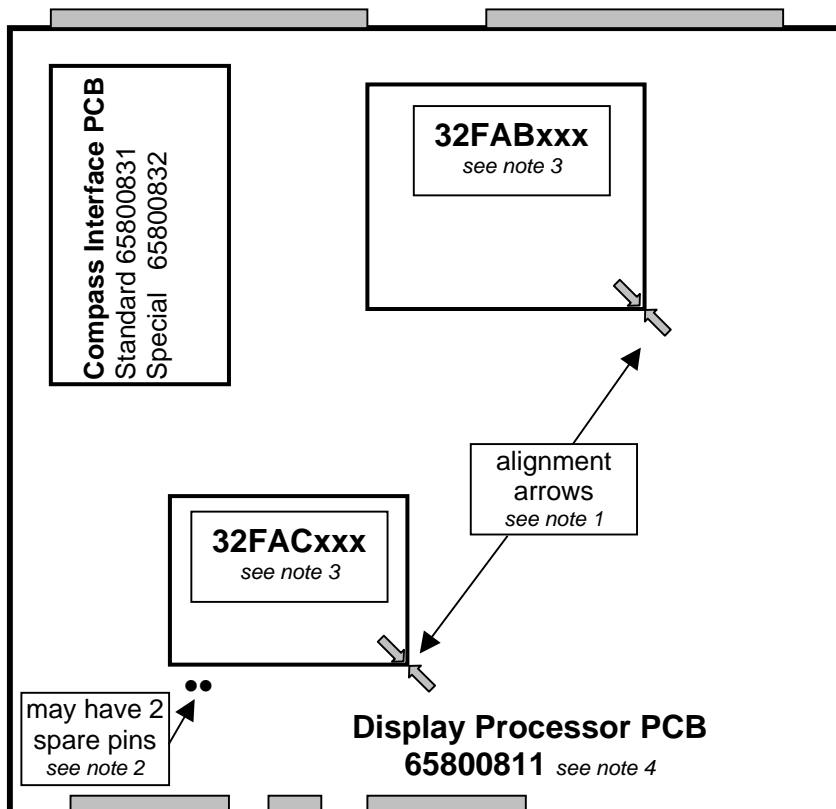

**IMPORTANT**  
Ensure anti-static precautions are taken when handling electronic assemblies.

- Notes**
1. Ensure the alignment arrows face each other when fitting the PCBs.
  2. On Display PCBs issue 3 and above there will be 2 pins unsued.
  3. xxx indicates Software Version:
- |     |         |
|-----|---------|
| xxx | Version |
| 011 | 3.00    |
| 012 | 3.01    |
| 013 | 3.02    |
| 014 | 3.03    |
| 022 | 3.04    |
| 023 | 3.05    |
- IMPORTANT**  
ALL 3 FLASH PCBs **MUST** BE THE SAME VERSION NUMBER
4. Display Processor **MUST** be issue 3 or >
  5. Radar Processor **MUST** be issue 4 or >

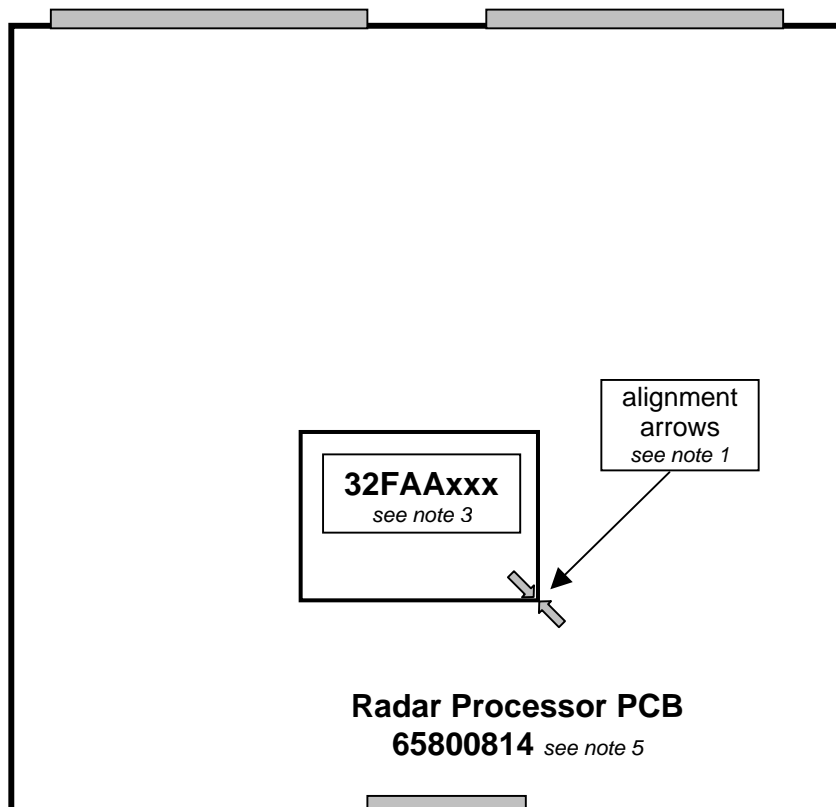

*NOT DRAWN TO SCALE*