\square


2004 > G 2.0 DOHC > Body Electrical System

REMOVAL

- 1. Disconnect the negative(-) battery terminal.
- 2. Remove the 2 screws(A) holding the instrument facia panel.




- 3. Open the ashtray then remove the ashtray assembly after pushing the plate down.
- 4. Remove the 2 screws(A) after removing the ashtray.

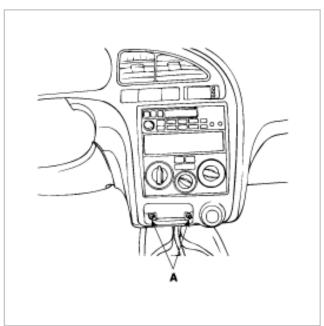

5. Disconnect the connectors from the instrument facia panel.

http://www.hmaservice.com/viewer/content.asp?vehicletype=Pas...EHY%5EXD13%5E2004%5Ebd%5E3%5Enone%5Enone%5Enone%5Eshop%5E%24

6. Remove the audio unit(A) after removing 4 screws.

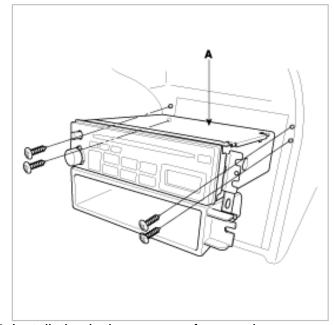

7. Installation is the reverse of removal.

CD AUTO CHANGER

- 1. Disconnect the negative(-) battery terminal.
- 2. Remove the CD auto changer from the left side of trunk room, after removing 4 bolts.
- 3. Installation is the reverse of removal.

INSPECTION

TAPE HEAD AND CAPSTAN CLEANING

- 1. To obtain optimum performance, clean the head(A), and capstan(B) as often as necessary, depending on frequency of use and tape cleanliness.
- 2. To clean the tape head and capstan, use a cotton swab dipped in ordinary rubbing alcohol. Wipe the head(A) and capstan(B).

